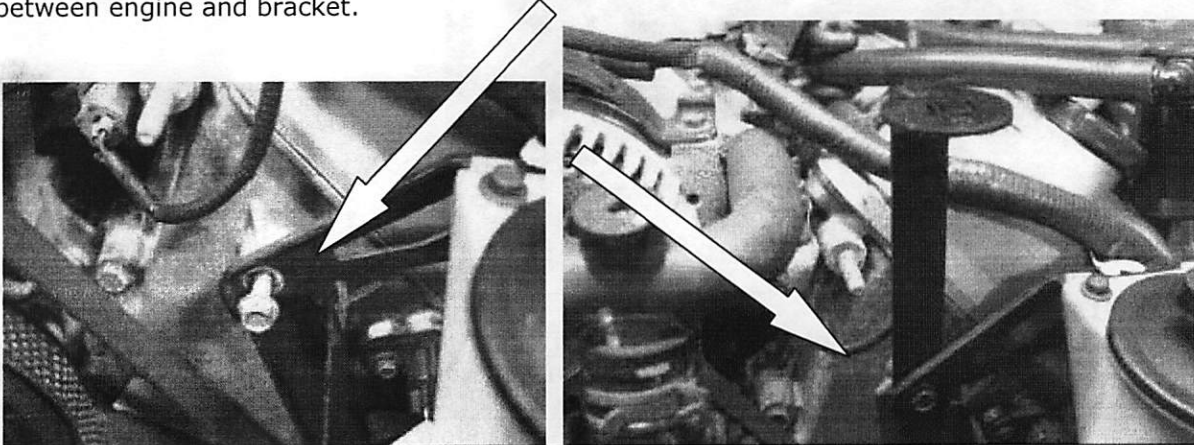

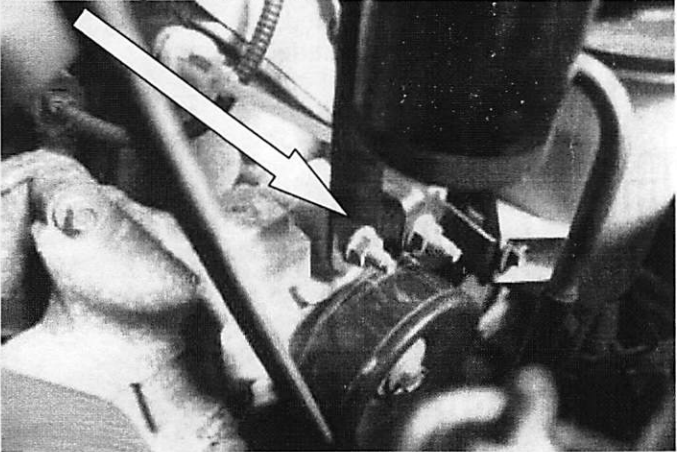



**Installation Instructions**  
**JLT 3.0 Oil Separator, Driver side (1999-2004 Cobra & 2003-2004 MACH I)**  
**#3018D**

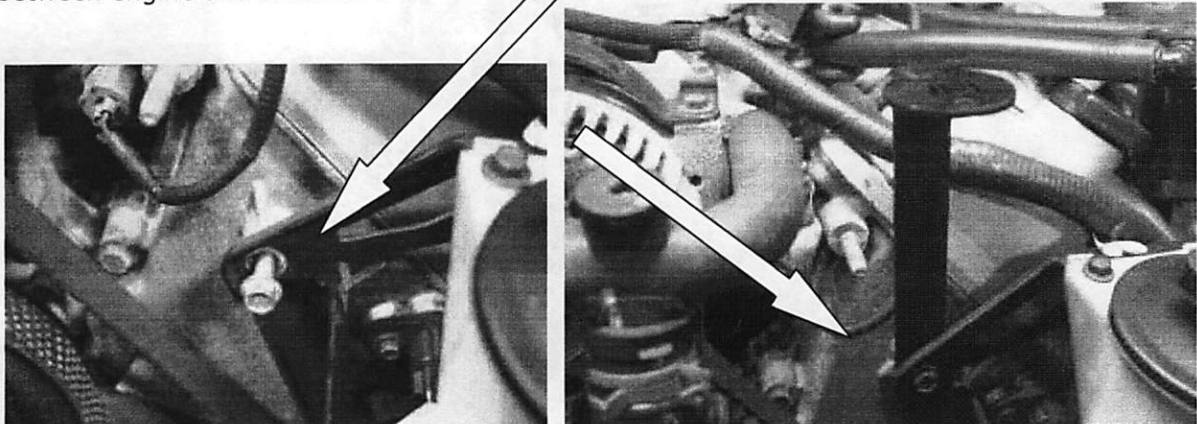

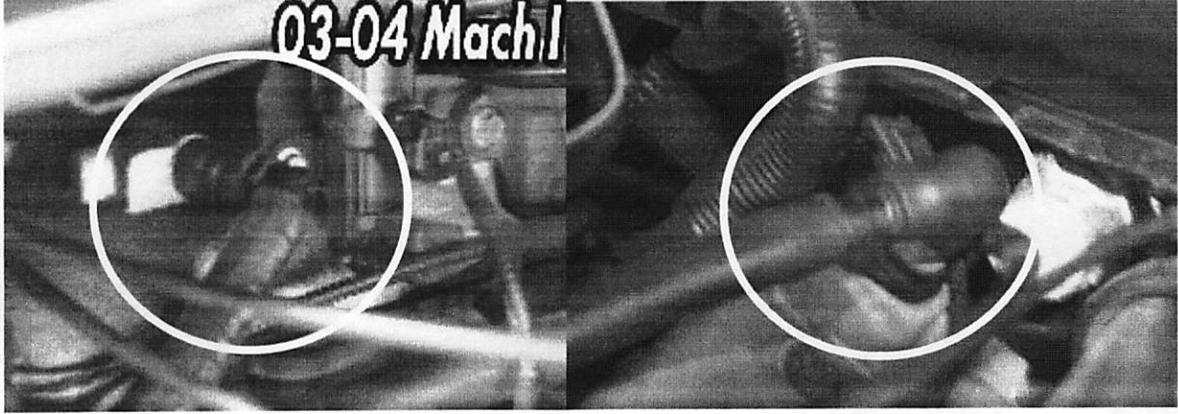
Please review complete instructions prior to installing. **1999/2001 Cobra:**

Step#	
1	<p><b>Verify you have all of the following parts included in the kit:</b>                      (1) JLT Separator with (2) 90° fittings and (2) 1/2" hoses installed, (1) Mounting Bracket,                      (2) M4x10 Screws, (1) 1/2"-3/8" fitting, (1) 1/2"-3/8" 90° Threaded Fitting,                      (2) 1/2"-5/8" Fittings, (1) 1.5" 5/8" Hose with 1/2" fitting installed</p>
2	<p>Remove stock hard plastic hose.</p>
3	<p>Remove bolt from power steering bracket and use to mount JLT bracket. Put JLT bracket between engine and bracket.</p> 
4	<p><b>FITTINGS</b>                      Cut hose on "J" side of Separator to 13" and thread 3/8" threaded 90° fitting into cut end.                      Use oil on fittings and install (1) 1/2"-3/8" fitting in the hose on the "T" side.</p>
5	<p>Route hoses under existing lines along the valve cover and install Separator onto JLT bracket with supplied screws.</p>
6	<p>Insert "J" side fitting into the 3/8" hose on the manifold and the "T" side fitting into the 3/8" hose on the PCV valve.</p>
7	<p><b>DONE!</b></p> 

Please review complete instructions prior to installing. **2003/2004 Cobra:**

<b>Step#</b>	<p><b>Verify you have all of the following parts included in the kit:</b>                  (1) JLT Separator with (2) 90° fittings and (2) 1/2" hoses installed, (1) Mounting Bracket,                  (2) M4x10 Screws, (1) 1/2"-3/8" fitting, (1) 1/2"-3/8" 90° Threaded Fitting,                  (2) 1/2"-5/8" Fittings, (1) 1.5" 5/8" Hose with 1/2" fitting installed</p>
<b>1</b>	
<b>2</b>	<p>Remove stock hard plastic hose.                  Use existing nut to mount bracket shown here.</p>
<b>3</b>	
<b>4</b>	<p><b>FITTINGS</b>                  Use oil on fittings and install both 1/2"-5/8" fittings into both hoses.</p>
<b>5</b>	<p>Route hoses under existing lines along the valve cover and install Separator onto JLT bracket with supplied screws.</p>
<b>6</b>	<p>Insert "J" side fitting into the 3/8" hose on the manifold and the "T" side fitting into the 3/8" hose on the PCV valve.</p>
<b>7</b>	<p>DONE! CIRCLES show where your connections will be.</p>
<b>7</b>	

Please review complete instructions prior to installing. **2003/2004 MACH I:**

Step#	
1	<p><b>Verify you have all of the following parts included in the kit:</b>                      (1) JLT Separator with (2) 90° fittings and (2) 1/2" hoses installed, (1) Mounting Bracket,                      (2) M4x10 Screws, (1) 1/2"-3/8" fitting, (1) 1/2"-3/8" 90° Threaded Fitting,                      (2) 1/2"-5/8" Fittings, (1) 1.5" 5/8" Hose with 1/2" fitting installed</p>
2	<p>Remove stock hard plastic hose.</p>
3	<p>Remove bolt from power steering bracket and use to mount JLT bracket. Put JLT bracket between engine and bracket.</p> 
4	<p><b>FITTINGS</b>                      Rotate the 90 degree fitting on the J side of the Oil Separator facing down.</p>  <p>Cut hose on "J" side of Separator to 13" and the 90° fitting/5/8" hose combo into cut end. Use oil on fittings and install (1) 1/2"-5/8 fitting in the hose on the "T" side.</p>
5	<p>Route hoses under existing lines along the valve cover and install Separator onto JLT bracket with supplied screws.</p>
6	<p>Insert "J" side fitting onto the fitting on the manifold and the "T" side fitting into the 5/8 hose on the PCV valve.</p>
7	



To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles.

Thanks for the business. If you have any questions, please e-mail [info@JLTtruecoldair.com](mailto:info@JLTtruecoldair.com) or call 757-335-1940. Our hours are Monday-Friday, 8:00am – 5:00pm Eastern Time.

**Warranty:** JLT Performance Inc. will repair or replace any part of their product found upon our inspection to be defective in workmanship or material within 1 year from the purchase date for the original purchaser.

**Disclaimer:** JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any of the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.

**Return Policy:** All returns will be subject to a 10%-25% restocking fee. Air Filters will not be accepted for return unless they are in original plastic sealed bag. Please visit [www.JLTtruecoldair.com](http://www.JLTtruecoldair.com) for complete return policy.