
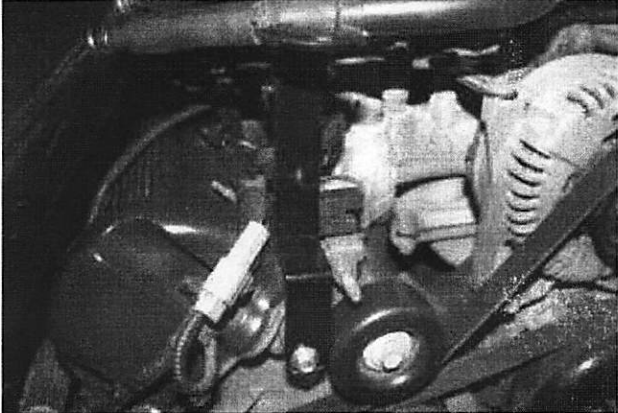


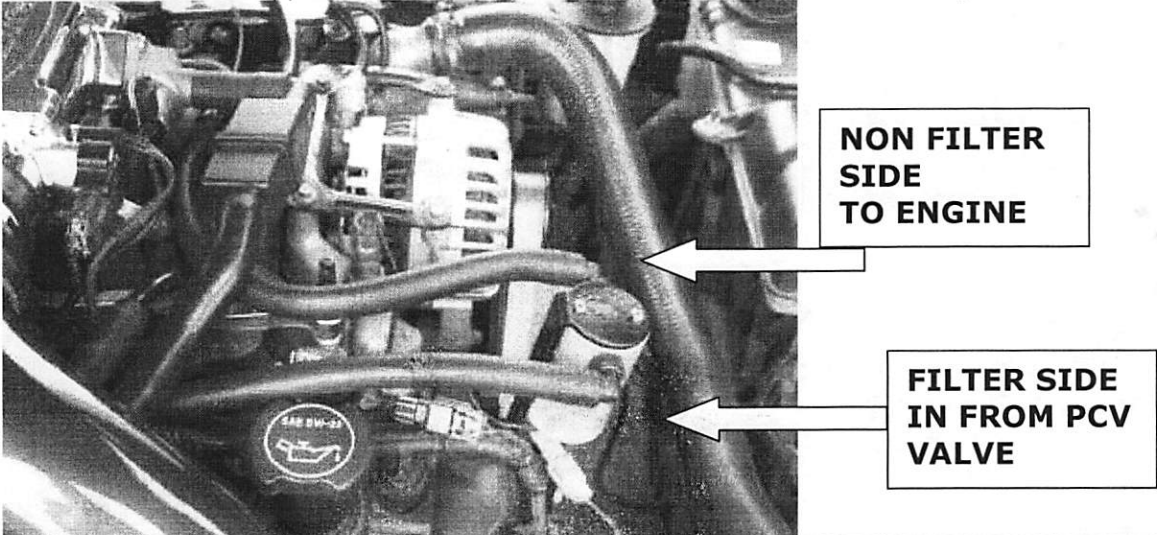

**Installation Instructions**  
**JLT 3.0 Oil Separator (1999-2004 Mustang GT; 2001 Bullitt, Passenger Side)**  
**#3019P**

Please review complete instructions prior to installing.

Step#	
1	<b>Verify you have all of the following parts included in the kit:</b> (1) JLT Oil Separator with Elbow Fittings, (1) mounting bracket, (2) fine thread machine screws, (1) bolt, (2) 1/2" hoses, (1) 1" section of 3/8" hose (2) Fittings 5/8"ID x 1/2"ID, (2) Fittings 1/2"ID x 3/8"ID (1) Fitting 3/8"ID
2	<b>Gather all of the following tools needed for the installation:</b> Drill with small bit, Phillips screw driver
3	Remove the factory PCV hose
4	Use the supplied bolt and mount bracket
4	
5	Use the 2 supplied fine thread screws to attach the Oil Separator to the mounting bracket.
6	<p>Use the supplied hoses and 5/8"ID x 1/2"ID fittings to connect from the PCV VALVE to the FILTER SIDE of Separator and from the other fitting to the INTAKE MANIFOLD</p> <p><b>BULLITT:</b> Use the supplied 1/2"ID x 3/8"ID fittings and 3/8" hose to make your connections</p> 

To properly clean the filter in the Oil Separator, remove it with a pick or small screw driver and spray any degreaser or solvent through it and let it air dry. Clean it every 5,000 miles. Thanks for the business. If you have any questions, please e-mail [info@JLTtruecoldair.com](mailto:info@JLTtruecoldair.com) or call 757-335-1940. Our hours are Monday-Friday, 8:00am - 5:00pm Eastern Time.

**Warranty:** JLT Performance Inc. will repair or replace any part of their product found upon our inspection to be defective in workmanship or material within 1 year from the purchase date for the original purchaser.

**Disclaimer:** JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.

**Return Policy:** All returns will be subject to a 10%-25% restocking fee. Please visit [www.JLTtruecoldair.com](http://www.JLTtruecoldair.com) for complete return policy.