

2013-2014 Dual Halo LED Tail Light




Step 1

Open the trunk to gain access to the interior panels.




Step 2

Remove the plastic trunk liner by removing the (4) twist off plastic knobs. Unclip the panels electrical connector and then remove the panel from the vehicle.

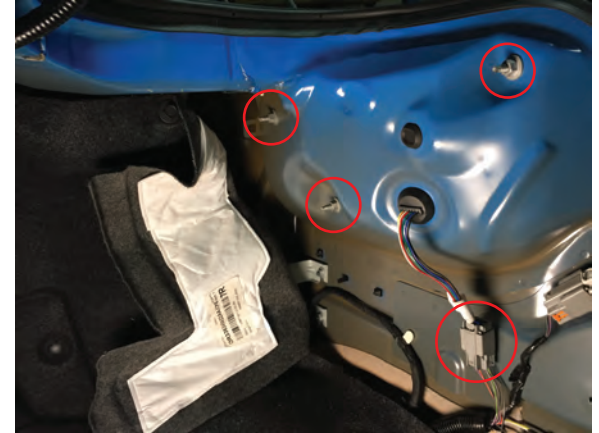


Step 3

Fold back the interior panel to access the (3) 11mm nuts securing the tail light to the vehicle. Loosen and remove the nuts. Unplug the tail lights electrical connection.

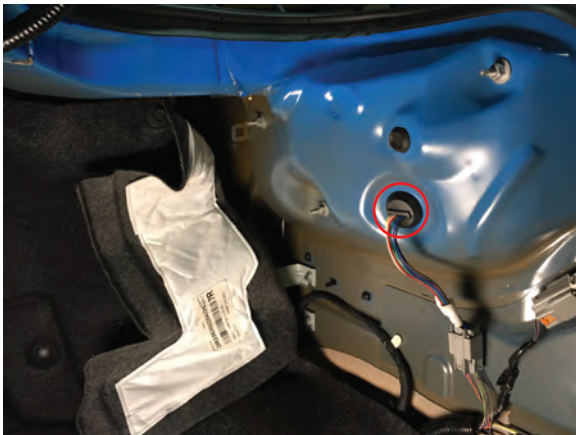

Step 4

Push out the wiring grommet and feed the plug through the hole.

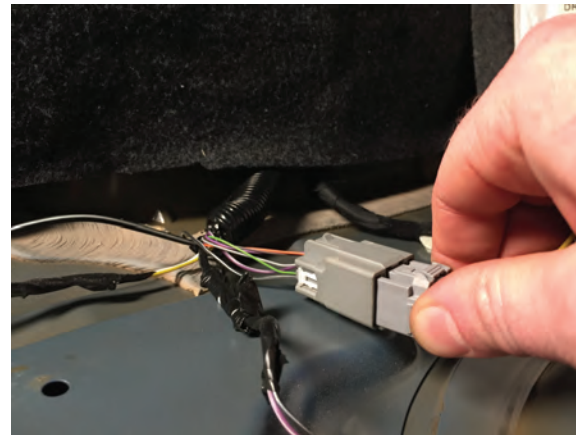

Step 5

Install the Raxiom light. Connect the electrical connection and tighten the factory nuts.



Step 6

Install the tail light and interior panels in the reverse order.