






Step 1
Open the trunk to gain access to the interior panels.

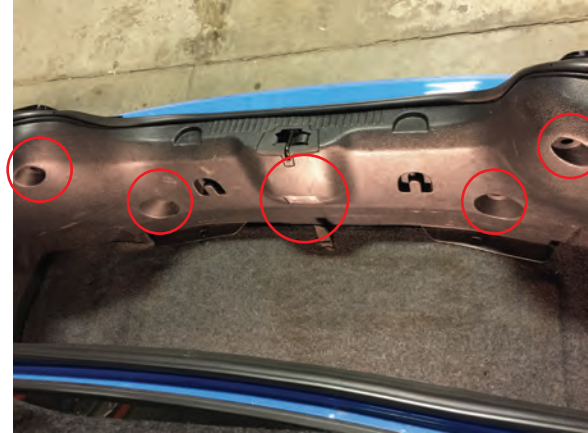


Step 2
Remove the plastic trunk liner by removing the (4) twist off plastic knobs. Unclip the panels electrical connector and then remove the panel from the vehicle.

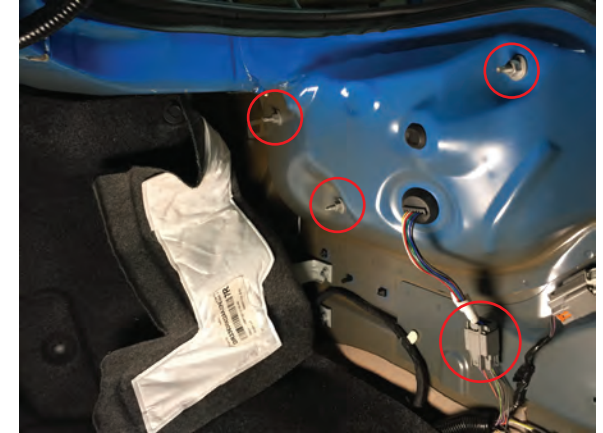

Step 3
Fold back the interior panel to access the (3) 11mm nuts securing the tail light to the vehicle. Loosen and remove the nuts. Unplug the tail lights electrical connection.

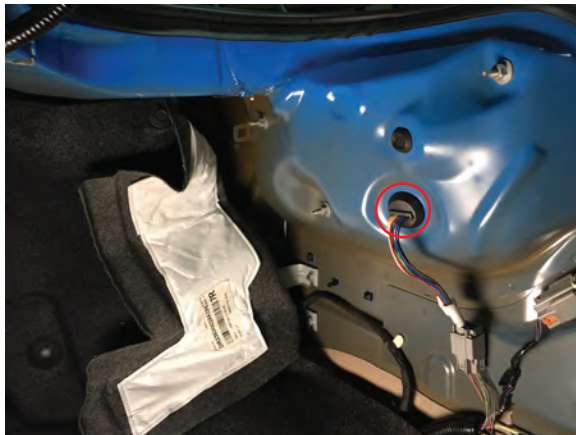

Step 4
Push out the wiring grommet and feed the plug through the hole.

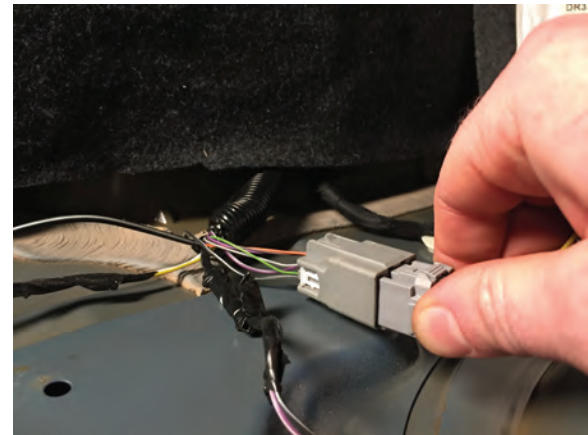

Step 5
Install the Raxiom light. Connect the electrical connection and tighten the factory nuts.



Step 6
Install the tail light and interior panels in the reverse order.