



Open the factory fuel door. Using a small flat head screw driver, apply light pressure on the center clip.



Slide the factory fuel door off the fuel door hinge.



Line up the fuel door's (4) alignment tabs. Slide the fuel door onto the hinge until it clips.



Slowly close fuel to ensure proper quarter panel clearance.