

Installation Instructions for Plug-In Sequential Tail Light Kit (96-04 Mustang)

Tools Required:

11mm Deep Socket and Ratchet

Step 1:

Remove the plastic fasteners that secure the inner trunk liner. Pull back the liner enough so that you have access to the nuts that hold the tail light in place.

Step 2:

Using an 11mm socket, remove the 4 nuts that hold the tail light to the body. Unplug the harness and remove the tail light from the vehicle.




Step 3:

Place a towel on the rear bumper to protect the paint. Install the new harness through the body and plug in the connector. Gently push the rubber gasket into the hole until it is flush with the body. This is important to provide a water-tight seal for the trunk.



Step 4:

Remove the bulbs from the factory harness and place them into the new sequential harness. (Make sure that the three signal bulbs are all dual-filament 3157 bulbs – The B/U light bulb can be either 3157 or 3057). With the harness lying on the bumper, turn the signal or hazard flashers on. With the bulbs sequencing from the inside out, install them into the tail light.

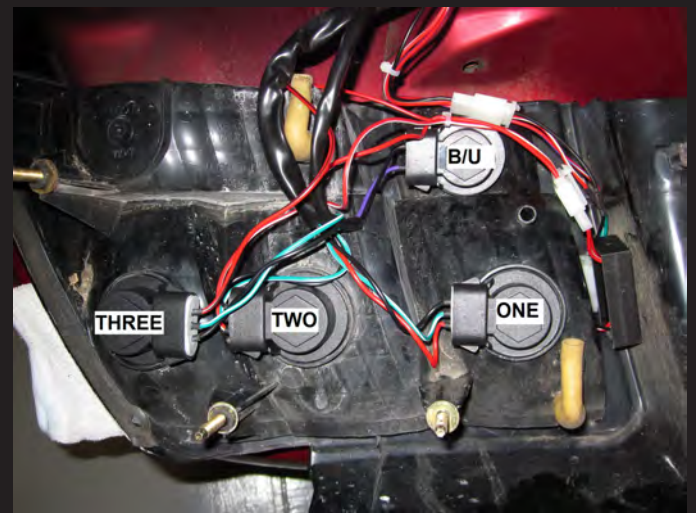

Step 5:

Re-install the tail light into the body with the 4 11mm nuts removed in Step 2. Repeat Steps 2-5 for opposite side tail light. Once both tail lights are verified to be sequencing properly, re-install the inner trunk trim to complete the installation.