



Installation Instructions for 05-09 Style Tail Lights (10+ Mustang)

Tools Required:

11mm Deep Socket or Wrench
Flat-Head Screwdriver or Trim Removal Tool


Step 1:

Open the trunk. Remove the plastic trunk liner by removing the 4 clips securing it to the body.



Step 2:


Remove the three 11mm nuts holding the factory tail light to the body. Unplug the wiring harness and remove the tail light from the vehicle.

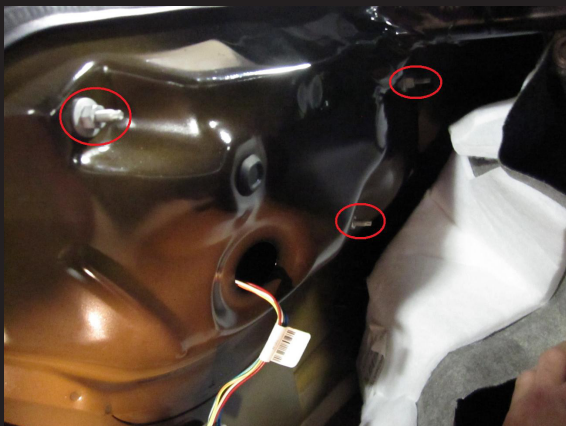

Step 3:


Once the tail light is removed from the vehicle, set it face down on top of something that won't scratch the lens. Remove the 3 main bulbs by twisting counter-clockwise. Remove the two smaller reverse bulbs along with the harness clip that is attached to the tail light housing.

Note: Be careful not to directly touch the bulbs when pulled from the factory tail light housing.

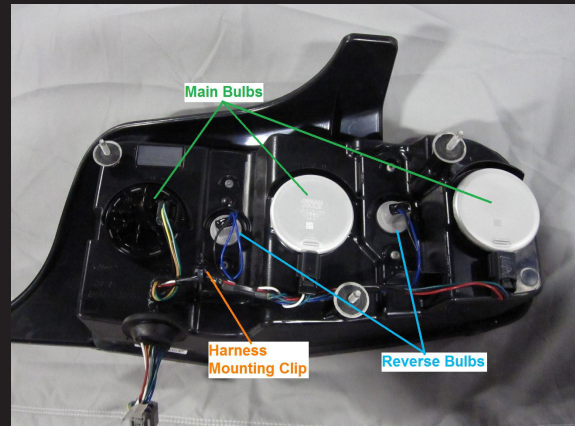

Step 4:

Install the wiring harness into the new tail light as shown below. The only change will be the reverse bulbs location shown in the photo below.

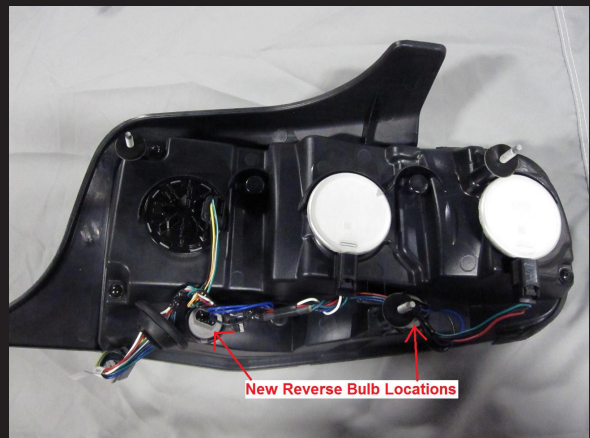

Step 5:

Install the tail light back onto the vehicle using the three 11mm nuts you removed in Step 2. Repeat Steps 2-4 for opposite side tail light to complete the installation. Ensure proper operation of lights, signals, and reverse lights before driving the vehicle.