

## CDC 2005+ Mustang Deck Lid Trim Panel Installation Guide



The below installation instructions work for the following products:

- 2005+ Ford Mustang CDC Rear Black Trim Panel
- 2005+ Ford Mustang CDC Rear Black Trim Panel (GT Emblem)



The following instructions are for the installation of the CDC Deck Lid Trim Panel and the CDC Deck Lid Trim Panel with GT logo for the 2005+ S197 Mustangs.

### Tools Required:

- Razor scraper
- Isopropyl Alcohol (rubbing alcohol)
- Heat gun or Hair dryer
- Small prying tool

### Installation:

#### Removing Rear Emblem


1. Tape area around emblem. (Figure 1)\



2. Warm emblem with a heat gun or hair drier.
3. Insert a plastic or wooden wedge between the emblem and deck lid to remove. (Figure 2)



4. Then rub off the solid glue from where the emblem was with Isospropyl Alcohol.
5. Place the keyhole black out sticker around the key hole.

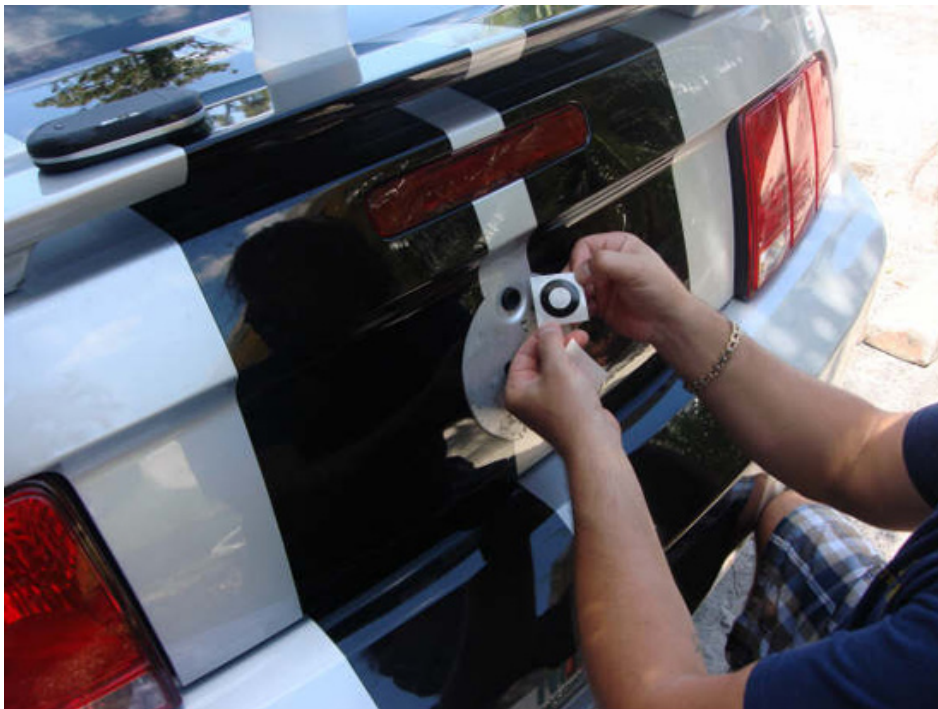

**NOTE:** MAKE SURE THE AREA IS CLEANED WITH ISOPROPYL ALCOHOL

### Installing Rear Deck Lid Trim Panel:

**NOTE:** BEFORE YOU DO ANYTHING ELSE CLEAN THE WHOLE TRUNK LID WITH ISOPROPYL ALCOHOL, AND MAKE SURE IT IS ALL CLEAN. IF THIS IS NOT DONE THE GLUE ON THE COVER WILL NOT HOLD PROPERLY.

KEEP THE CAR IN THE SHADOW FOR 20 MINUTES SO THE TRUNK LID CAN COOL DOWN.

1. Center the Trim Panel on Deck Lid side to side. The Trim Panel should be approximately 1/16" from the edge on both sides and along the bottom of the Deck Lid. Once proper location has been achieved, press Trim Panel to deck lid while pulling the red backing from behind the Trim Panel. Firmly press on Trim Panel to seat Acrylic Tape.
2. Let the car sit for about 2 hours before driving so the glue can bond then double check the Trunk Deck Lid before driving.



Finished Installation

Installation instructions provided by AmericanMuscle customer by Emin Hodzic

Find more **how-tos**, **instructions** and **videos** at [www.americanmuscle.com](http://www.americanmuscle.com)!