

Steel Bumper Letters

Tools Required:

- ✓ Spray bottle with water/soap mixture
- ✓ Clean micro fiber rag
- ✓ Heat gun




Instructions:


1. Clean all the bumper inserts with the spray bottle with water/soap solution. Wipe dry with micro fiber rag.



2. Line up your new bumper inserts .

3. Peel off the 3m backing tape off the letter you are going to apply.

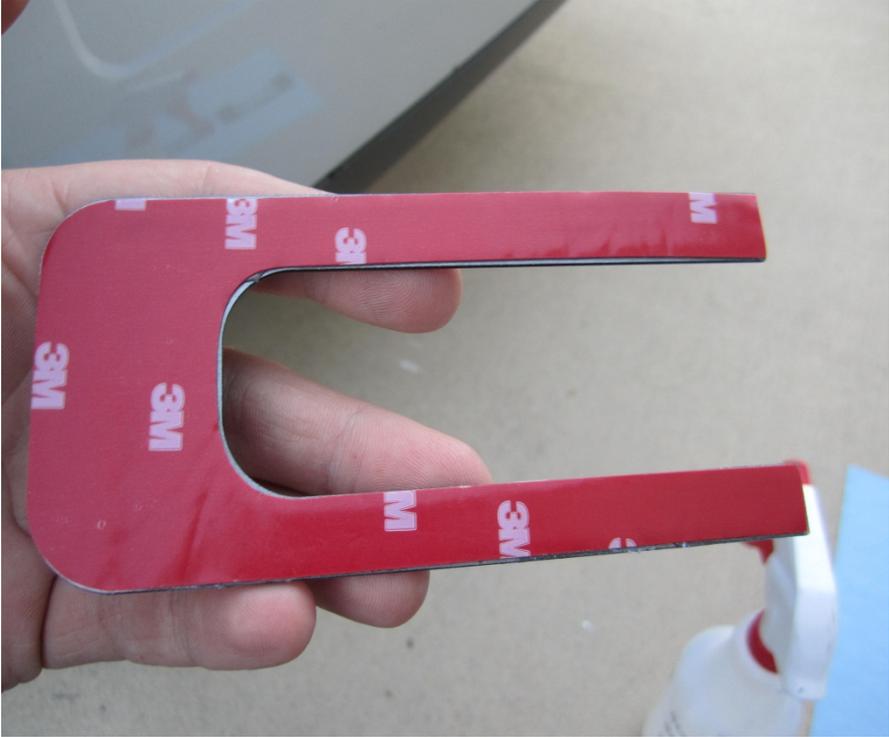

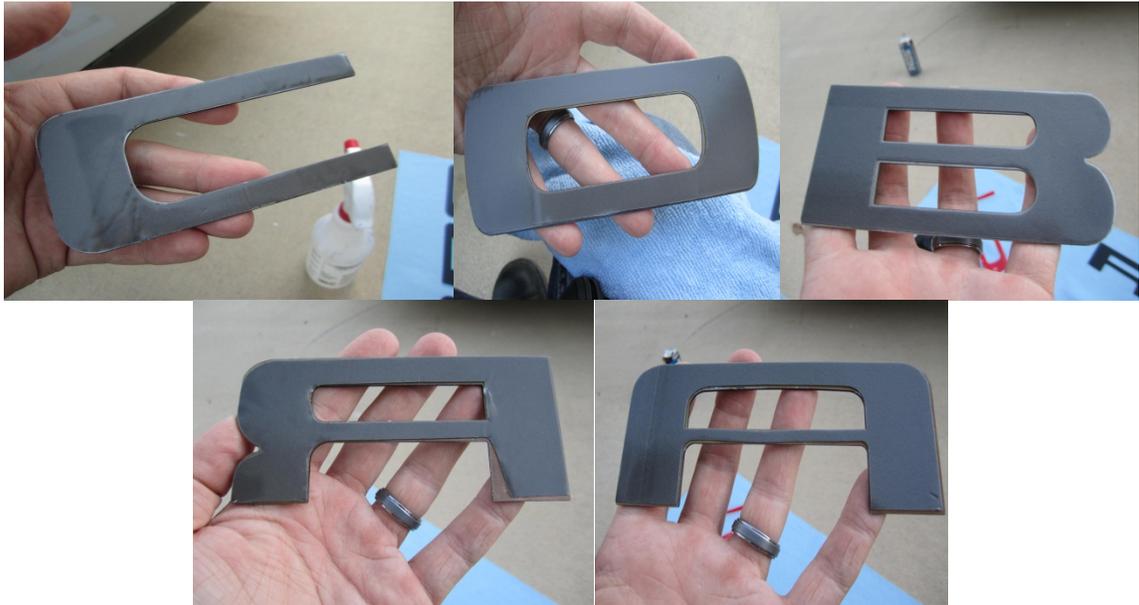

4. Line up each letter evenly on the bumper one at a time. Once you are happy with the placement press firmly on the letter to seat the adhesive.



5. Once you have applied all the letters go back over them with a heat gun on a low setting to ensure the adhesive backing is seated well.
6. Once you're done all you should have left is 5 adhesive backing covers.
7. Enjoy your new simple add on to your car from American Muscle.



Installation Instructions provided by AmericanMuscle customer Mitch Sweeny 12.10.12