

## Instructions for installing Tokico HP Series Rear Shocks

Fitment Includes:

V6: 05-10 - GT: 05-10 - Bullitt: 08-09

### Tools Required:


- ✓ 15mm socket
- ✓ 17mm socket
- ✓ Ratchet
- ✓ 15mm wrench
- ✓ Pliers or wrench

### Installation Instructions:

1. Start by removing the negative battery cable from the battery.



2. Jack up the rear of the car and put it on jack stands. Put a floor jack under the rear differential for support.

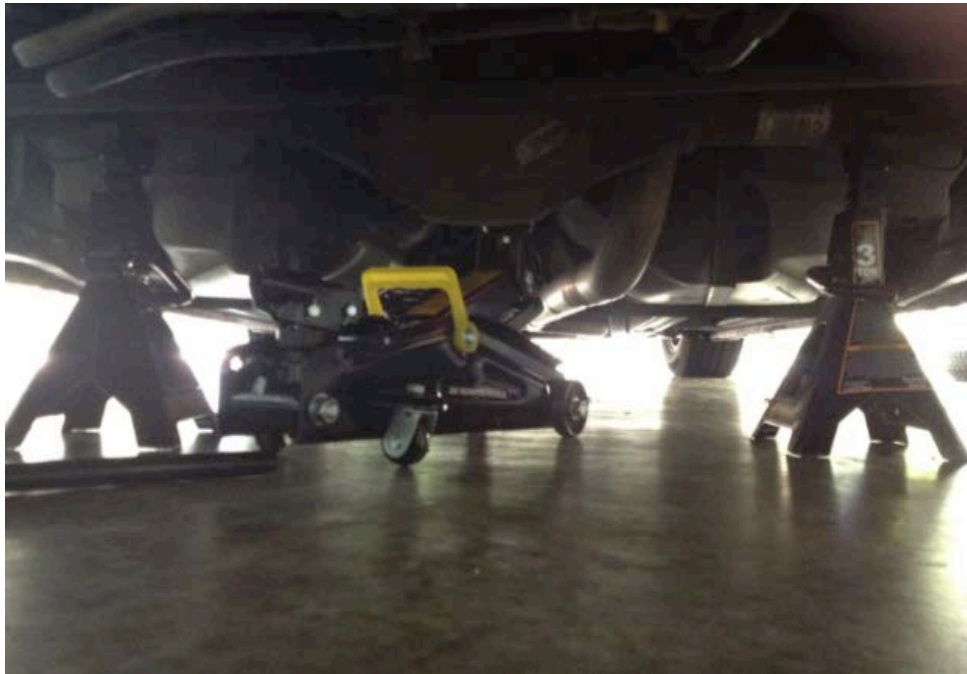

3. While in the trunk pull back the liner to get to the top of the shock. Place a 15mm wrench around the bottom of the locking nut, and turn the top of the nut with a wrench or pliers.



4. Once the top bolt of the shock is removed, remove the 15mm bolt at the bottom of the shock.



5. Once the bolt is removed, remove the shock from the car.

6. Insert your new Tokico HP Series Shock into the rear housing and tighten the 15mm bolt.

7. Tighten the top of the shock with its provided 17mm bolt until the locking nut starts to turn. Then, use a 17mm wrench to hold the nut in place, and use a wrench or pliers to turn the top until the nut is tightened.



8. Once the shocks are installed, put your tires and negative battery cable back on and lower the car off the floor jacks.



Installation Instructions written by AmericanMuscle customer Laurence Arroyo 7/18/12