

## 2015 Side Rocker


REQUIRED - Alcohol Wipes  
- Adhesion Promoter



1  
Clean mounting surface with mild soap and water allow plenty of time for the panel to dry thoroughly. Test fit the rocker to ensure you have them on the proper sided. \*\*Note: A clean surface is essential for proper adhesion.



2  
Wipe down the mounting surface with the supplied alcohol wipe, and then adhesion promoter.

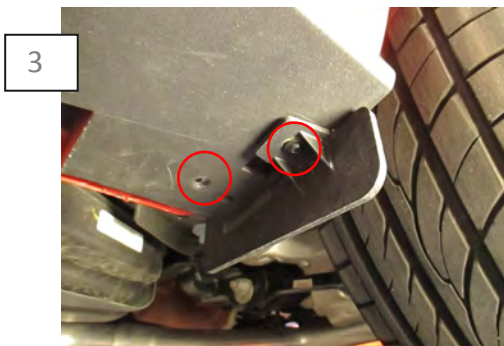


3  
Remove two torx screws and plastic retaining clip holding the plastic splash shield. Remove shield



4  
Remove the double side tape backing.



5  
Remove the double side tape backing.

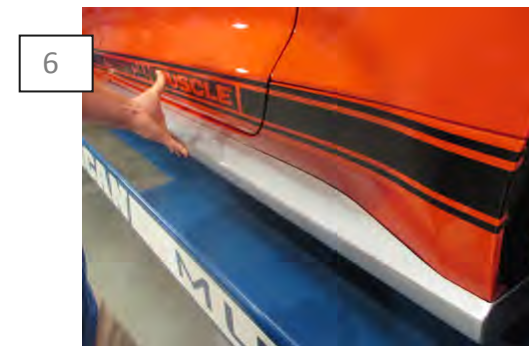

6  
Angle the rocker to ensure the panel is placed as far back as possible. Press the rocker flat, and apply firm pressure to the length of the panel.