


WING
SALTEEN 94-98

1. REMOVE FACTORY WING FROM THE DECKLID.
2. CLEAN THE DECKLID WITH WAX AND GREASE REMOVE.
3. CHECK WING FOR PROPER FIT BEFORE PAINTING.
4. PAINT WING TO MATCH FACTORY COLOR OF THE VEHICLE.
5. REMOVE ANY OVERSPRAY FROM UNDERSIDE OF WING WHERE THE TAPE WILL BE APPLIED.
6. WIPE DOWN THIS AREA WITH LAQUER THINNER AND APPLY ADHESIVE PROMOTER.
7. LAY DOWN 3M DOUBLESIDED TAPE ALONG THIS SAME SURFACE, BUT DO NOT PEEL OFF THE PROTECTIVE STRIP YET.
8. APPLY ADHESIVE PROMOTER TO THE DECKLID WHERE THE WING WILL BE CONTACTING.
9. SCREW IN THE 1/4-20 3/4" CAP SCREWS INTO THE THREADED INSERTS ON THE WING BY HAND. THIS IS

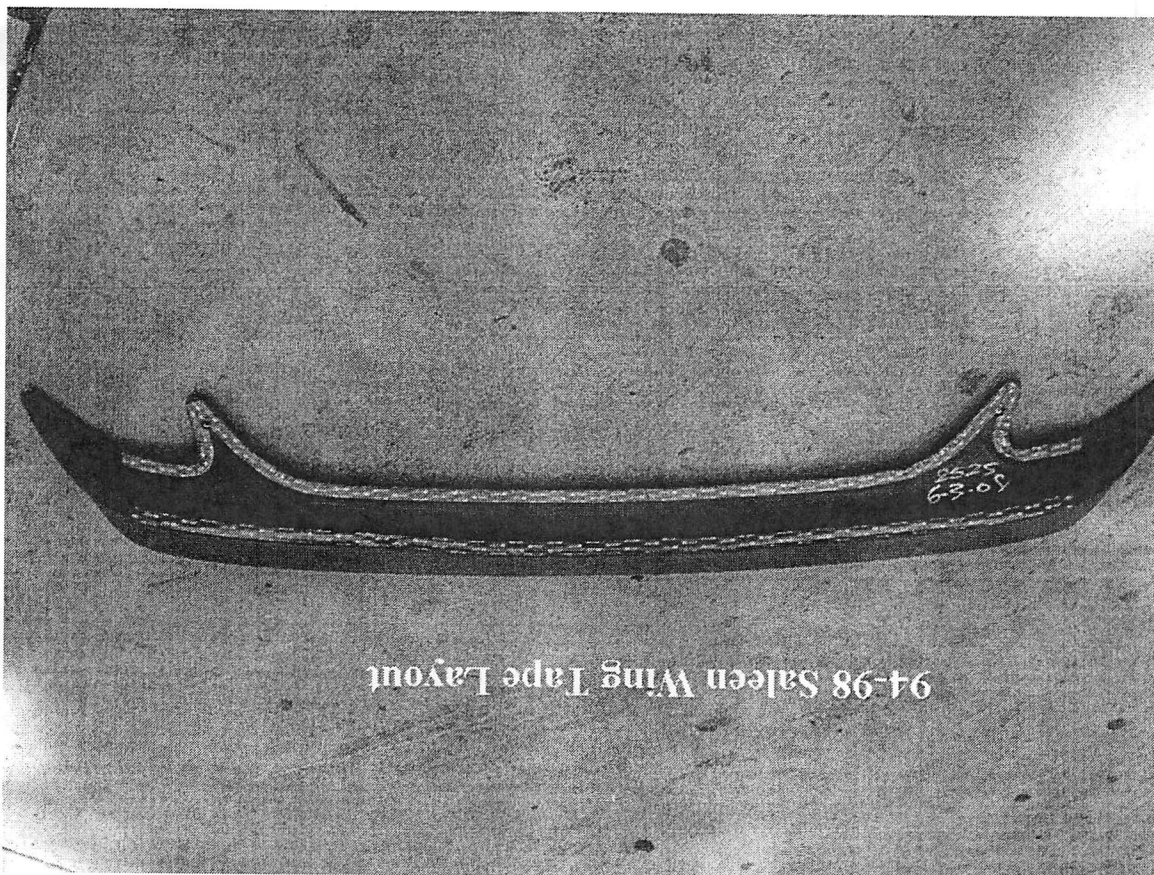

1	94-98 SALEEN WING (033R)
2	1/4-20 3/4" SOCKET HEAD CAP SCREW
2	8-18 STAINLESS STEEL WASHER
130"	3M DOUBLESIDED STICKY TAPE
1	3M ADHESIVE PROMOTOR PACKET

PARTS LIST

- TO ASSIST IN LINING UP THE WINGS POSITION USING THE HOLES ON THE DECKLID.
10. PEEL THE PROTECTIVE STRIP FROM THE TAPE AND STICK THE WING TO THE DECKLID.
11. FROM THE INSIDE OF THE TRUNK, REMOVE THE CAP SCREWS AND BOLT THEM BACK INTO THEIR SAME LOCATIONS WITH THE WASHERS AND TIGHTEN THEM FOR A FINAL TIME.
12. THE BOLTS SHOULD BE SNUG, BUT NOT TOO TIGHT. JUST ENOUGH SO THE WASHER IS SET.