


Prosport Inc. Performance Boost Gauge

Amber/White Display (270° Scale)


Electrical

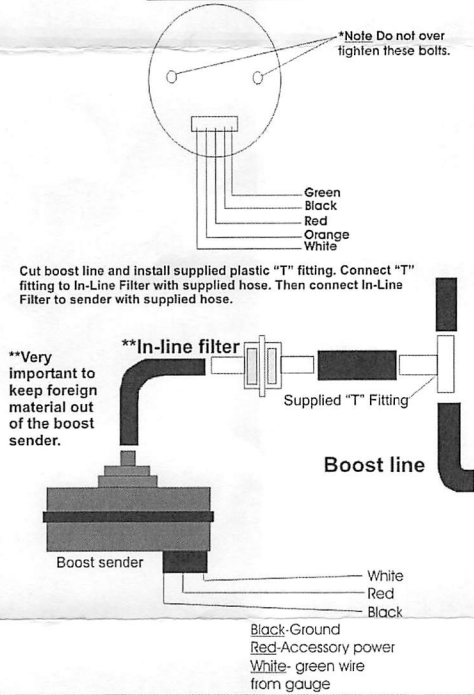


Wiring Instructions

Red- 12v Accessory Power (also run to sender)
Black-Ground
White- 12v Accessory power
Orange-Headlight switch
green- boost sender (Connects to white wire from sender)

*Note. Please be sure not to over tighten the screw..

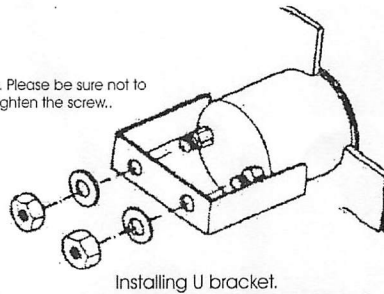

Mechanical

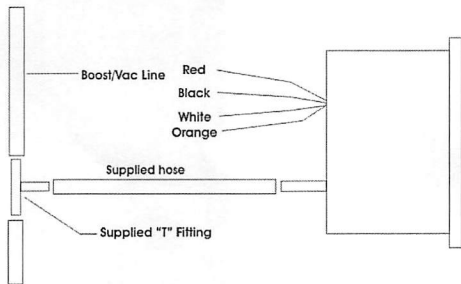

The instructions below will make the gauges white during the day and amber at night. For any other configurations please refer to the lighting diagram below.

Wiring Instructions

Red- 12V Accessory power
 Black - Ground
 White- Accessory power on
 Orange- Headlight switch
 (Once you turn the headlights on the gauge turns amber)

Lighting Diagram

Day Time	Night Time	
White	White	White — Connect to acc. Power Amber — Do not connect
Amber	Amber	White — Do not connect Amber — Connect to acc. Power
White	Amber	White — Connect to acc. Power *Most Amber — Connect to parking lamp Common
Amber	White	Amber — Connect to acc. Power White — Connect to parking lamp

