

MODERN BILLET


Carbon Fiber Underhood Dress-Up 2015-2017



Oil Cap Installation: Remove the factory oil cap by turning it counter-clockwise. Transfer the oil cap o-ring to the replacement cap.



Brake Fluid Reservoir Cap: Wash the brake fluid cap with soap and water. Allow the cap time to dry. ****Recommended:** Wipe the cap down with isopropyl alcohol to ensure the cleanest surface possible. Peel the tape backing and install on the factory cap.

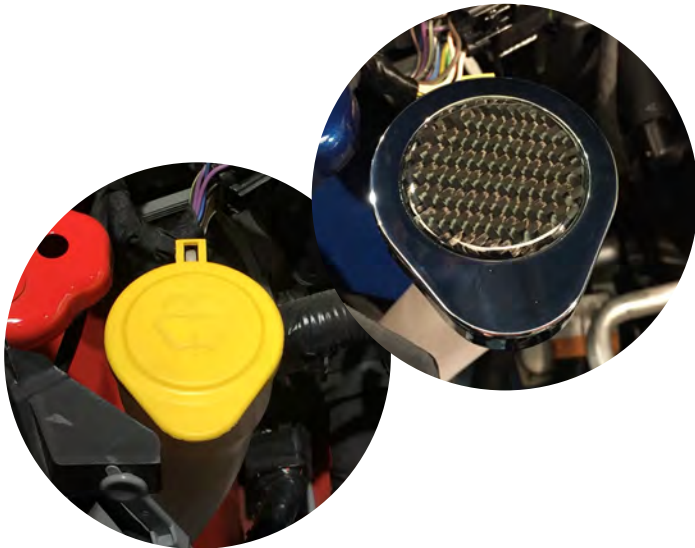

Windshield Reservoir Cap: Wash the windshield washer cap with soap and water. Allow the cap time to dry. ****Recommended:** Wipe the cap down with isopropyl alcohol to ensure the cleanest surface possible. Peel the tape backing and install on the factory cap.



Radiator Cap Cover: Wash the coolant reservoir cap with soap and water. Allow the cap time to dry. ****Recommended:** Wipe the cap down with isopropyl alcohol to ensure the cleanest surface possible. Peel the tape backing and install on the factory cap.