


1

Wash the rear window with soap and water. Allow the window and surrounding areas time to dry.
****Recommended:** Wipe the sides of the rear window glass with isopropyl alcohol to ensure the cleanest surface possible.



2

Apply the supplied 3M tape to the Rear Window Vents. Test fit the Vents on the vehicle to familiarize yourself with how they fit.

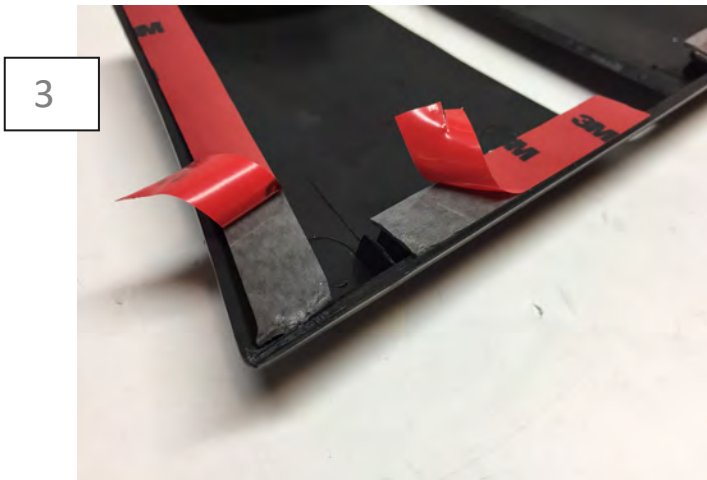

3

Once you are comfortable with how the vents fit, remove the tape backing and install.



4

Apply firm even pressure to all taped surfaces to ensure proper adhesion.