

Rear Diffuser Fins 15-17 w/ Non-Premium Rear Bumper

Installation Note

Bumper removal is not required for installation


Step 1:

Locate the factory mounting tabs on the rear bumper.




Step 2:

Starting with the fin labeled R1. Align the fin to the left of the factory mounting tab and flush against the bottom edge of the bumper. Mark and pre-drill only the bottom hole with a 1/8" drill bit. Loosely secure the fin to the vehicle using one of the supplied phillips screws.

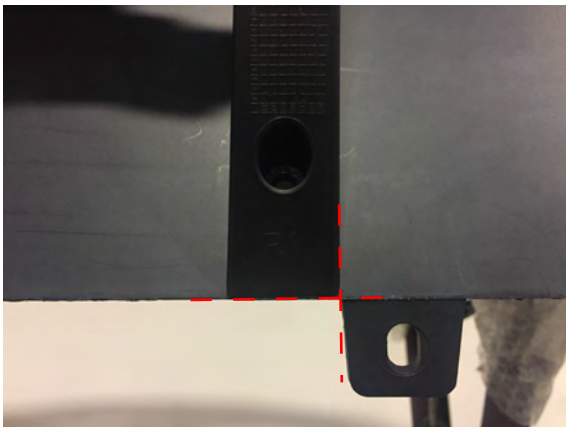

Step 3:

Make a mark on the bumper where the second fin will be placed. Measure 6 3/8" from the mounting tab referenced in step 2.

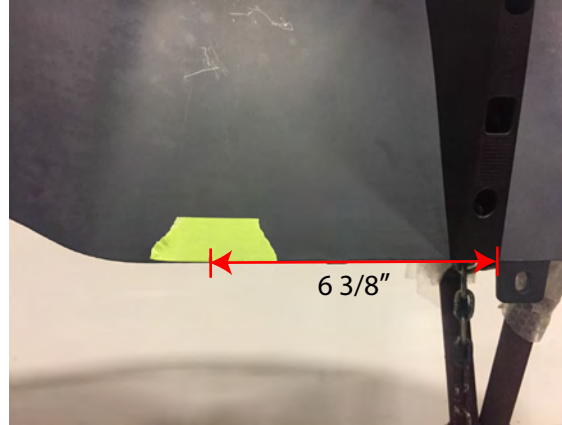

Step 4:

Align R2 with the bottom edge of the bumper so that the center of the fin lines up with the mark made in step 3. Pre-drill the bottom fin hole with a 1/8" drill bit. Loosely install the fin to the vehicle using one of the supplied phillips screws.



Step 5:

Adjust the top of the fins so that they are straight on the bumper. Mark and pre-drill all remaining screw locations.



Step 6:

Using a phillips screw driver, tighten all screws. **Note: Do not over tighten the screws. Repeat the process on the left side of the bumper.

