

MP CONCEPTS

15-17 50th Anniversary Decklid Emblem


REQUIRED Panel Removal Tool 1/4 Metric Socket Set
Flat Screw Driver Drill & Drill Bits



1 Using a panel removal tool, remove the caps covering the deck lid panel bolts. Then remove the (4) 7mm screws.



2 Use the panel removal tool to gently separate the factory deck lid panel from the deck lid.

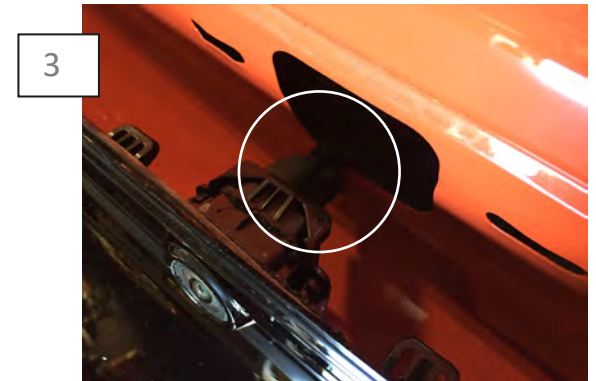

3 Unplug the reverse camera. Then remove the panel from the vehicle.



4 Remove the deck lid emblem by carefully removing the plastic weld from the back of the deck lid panel. Use an oversized drill bit and only remove enough material so that you can remove the emblem.



5 Wash the deck lid panel with soap and water. Allow the panel to dry. **Recommended: Wipe the panel down with isopropyl alcohol to ensure the cleanest surface possible.



6 Test fit the emblem on the center of the decklid panel, then peel the 3M tape backing from the emblem. Center the emblem and apply firm even pressure to ensure proper adhesion to the decklid panel.