





CJR002 S550 JACKING RAILS

Tools required:

1. Ramps or jack and jack stands
2. Ratchet
3. 15mm socket

Installation:

1. Place vehicle on ramps or lift vehicle and secure on jack stands
1. Remove 8 15mm bolts as shown in IMAGE 1 and 2.

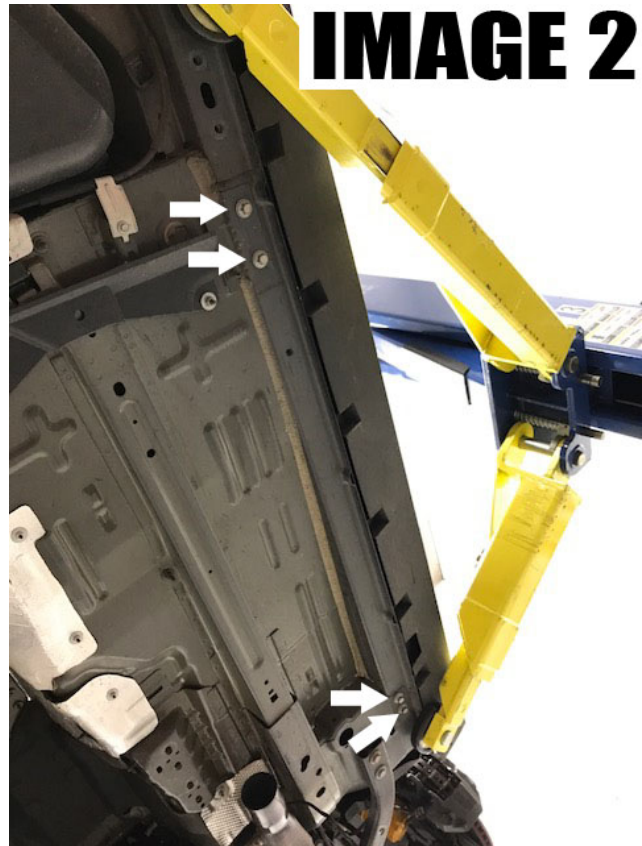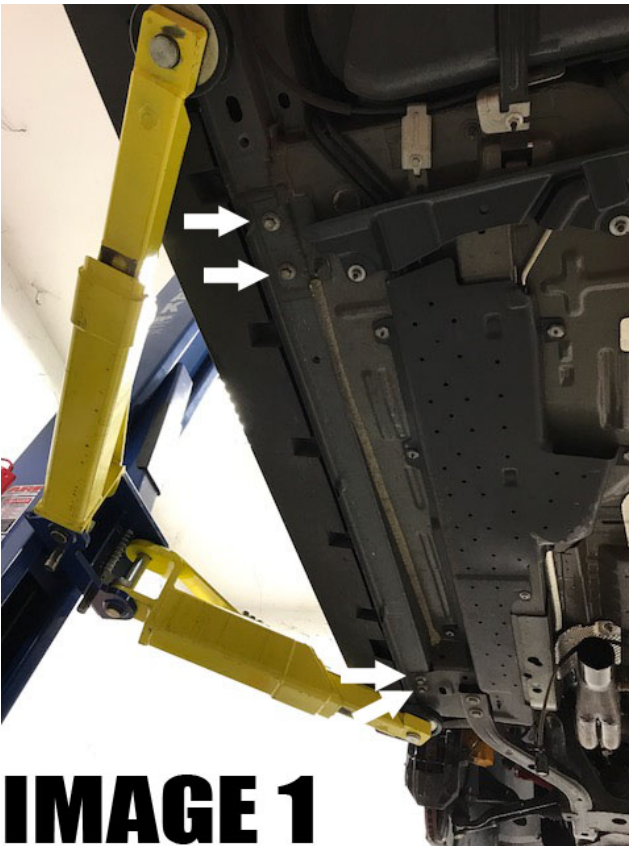


2. Install jacking rails using factory 15mm bolts as shown in IMAGE 3 and 4.
- NOTE: Drivers side rail is longer than passenger side.**



CJR002 S550 JACKING RAILS

continued

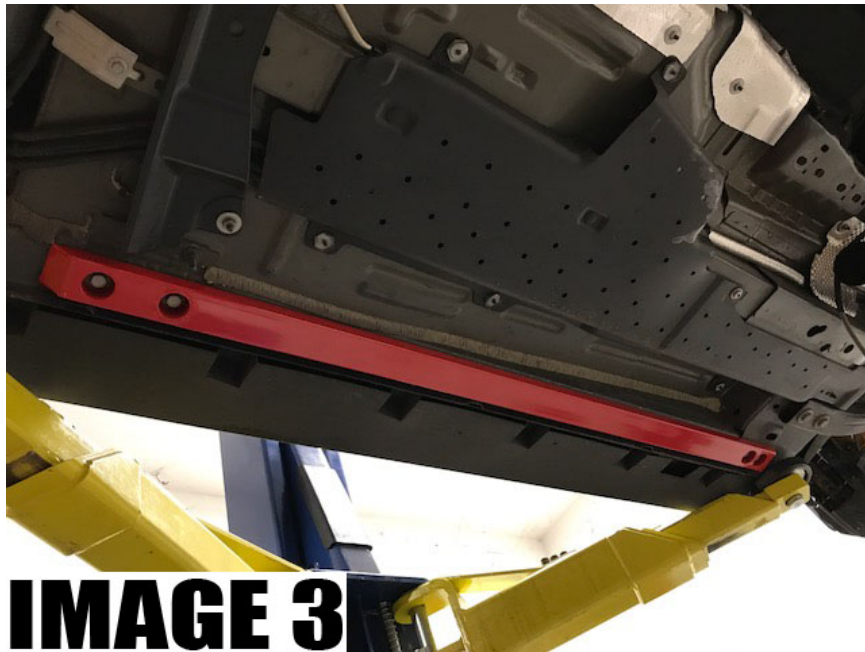

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.