


STEEDA[®]
Steeda Clutch Assist Spring Perch Upgrade
Installation Instructions: 555-7024



Tools Needed

1. Needle Nose Vice Grips

Removal of OEM clutch assist spring assembly

1. Depress the clutch pedal fully in order to initially compress the assist spring.
2. Using the needle nose vice grips clamp the middle two coils of the factory spring together, they should compress the coils far enough so that the top and bottom spring perches begin to unseat from their mounts on the pedal.



Figure 1



Figure 2

3. Using your hand, press down on the top spring perch and rotate the assembly towards the driver's seat to unseat it completely from the upper channel on the pedal.
4. Remove the assembly and carefully unclamp the vice grips.

Installation of Steeda upgraded clutch assist spring perches

1. Assemble the Steeda upgraded spring perches with either the OEM clutch assist spring or the Steeda clutch assist spring (sold separately).
 - (NOTE: It is suggested for smooth function to grease the male end of the assembly)
2. Depress the clutch pedal fully.
3. Place the bottom spring perch on the pin welded to the factory pedal.

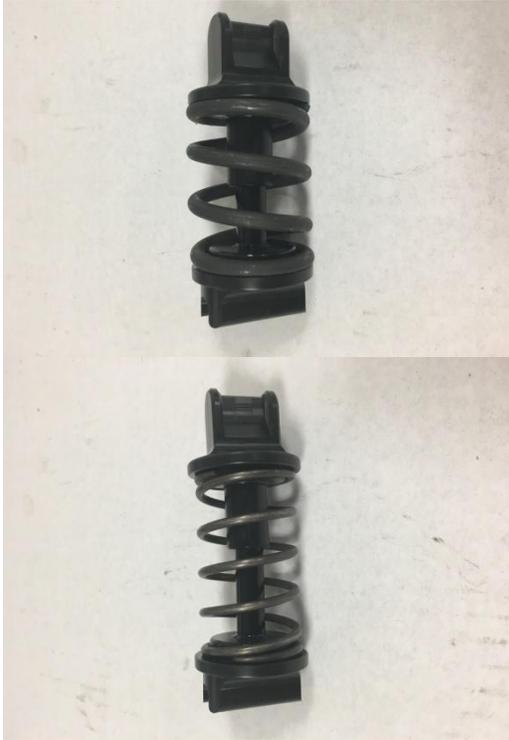


Figure 4



Figure 3

4. Next swing the assembly up into position, compress the spring using your hands and place the upper spring perch into the factory channel on the pedal.
5. Release the clutch spring.
6. Test that the assembly is properly installed by depressing the clutch a few times before driving.

Enjoy!