


## TCA046 INSTALLATION INSTRUCTIONS

### TOOLS REQUIRED:

- Hydraulic jack and jack stands
- Wrenches – 15mm, 18mm, 19mm

### INSTALLATION:

1. Lift the rear of the vehicle and safely support with jack stands under the cradle.
2. Using an 18mm wrench, remove the lower bolt on the vertical link as shown in **IMAGE 1**.
3. Remove the top bolt using a 15mm wrench. Remove vertical link.
4. Install the BMR vertical link using the factory lower bolt and the BMR supplied upper bolt and washer. Use a 19mm wrench to tighten the new upper bolt.
5. Torque the lower bolt to 129 ft/lbs and the upper bolt to 81 ft/lbs.
6. Re-install the wheel/tire and lower the vehicle.

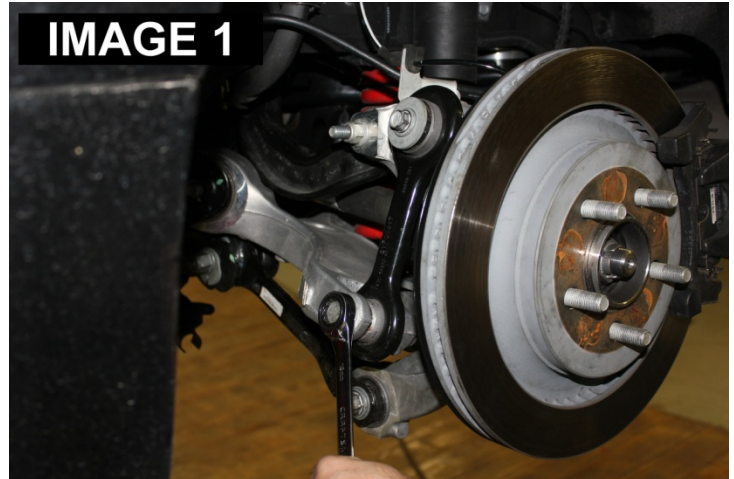

[WWW.BMRSUSPENSION.COM](http://WWW.BMRSUSPENSION.COM)

*This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, Buyer assumes all risk of any damage caused to the vehicle or person during installation or use of this product.*