


# AXIAL

## Installation Instructions for 1999-2004 Third Brake Light

### Step 1:

Open the trunk and remove the (2) 10mm nuts securing the factory third brake light to the deck lid.

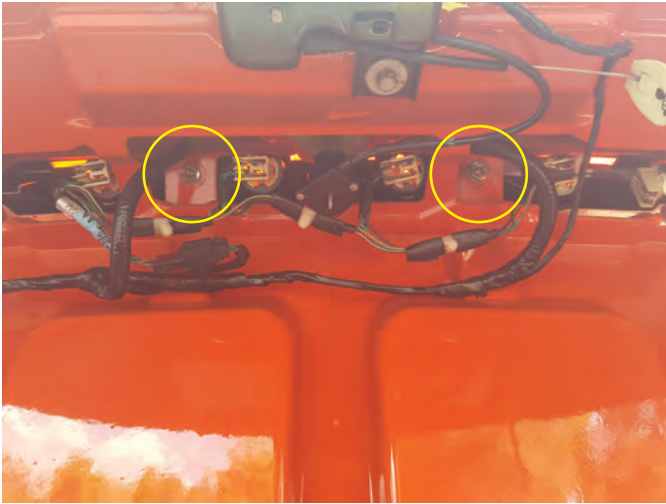


### Step 2:

Pull the factory brake light away from the deck. Twist the bulb sockets out of each light socket and remove the light from the vehicle.



### Step 3:

Carefully position the LED brake light into place. Connect each of the LED light sockets into the factory sockets.

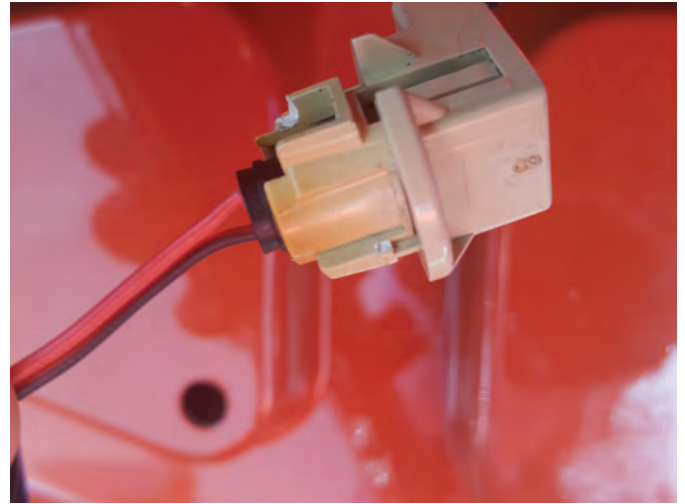

### Step 4:

Before reinstalling the LED brake light, apply the brakes to ensure all LEDs are illuminated. \*Note: If a section of LED's doesn't illuminate, remove the LED plug and flip it 180\*. Then, reinstall the (2) factory nuts to secure the light to the deck lid.

