

Part # 4411 & 4420 2010-2014 Ford Mustang Radiator Cover

**Notice: Install new, parts according to these instructions!
Altered Parts are Non-Refundable!**

Step 1

Remove the plastic push pins holding the factory radiator cover in place using a flat head screw driver **as shown in fig. A**. Then remove the radiator cover from the car.

Fig.A




TOOL: FLAT HEAD SCREWDRIVER

Step 2

Note: This step will require 2 people.

With one person holding the hood open remove the prop-rod using a 10mm socket **as shown in fig.B**. If the prop-rod is being reused, drill the 2 holes with a 1/4" drill bit through the new radiator cover before installing, if you have hood struts, the drilling of the holes is not needed.

Fig.B

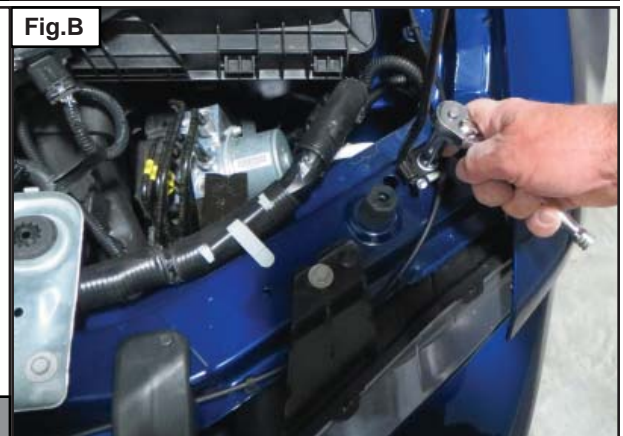

TOOL: 10MM RATCHET & SOCKET, 1/4" DRILL BIT

Step 3

The hood latch cable on the drivers side of the car needs to be moved to a new location. Remove the headlight bolt in order to slide the cable under the headlight mount. Before and After photo **as shown in fig.C**.

BEFORE


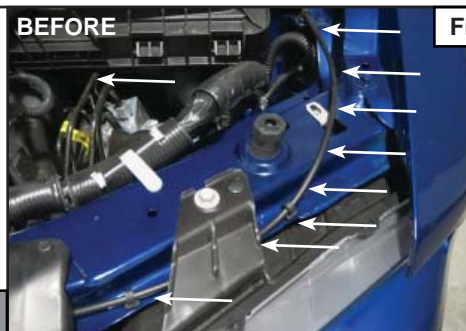


Fig.C

AFTER

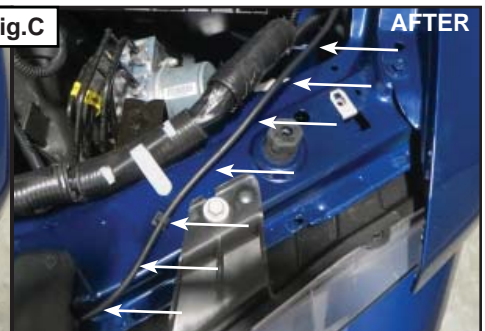


TOOL: 10MM RATCHET & SOCKET

PART # 4411 & 4420		
QTY	DESCRIPTION	HARDWARE #
3	2" VELCRO PIECES	91365
1	PROP-ROD HOLDER	CLACC6-BK

TOOL & MATERIAL LIST
FLAT HEAD SCREW DRIVER
10MM RATCHET & SOCKET
1/4" DRILL BIT (IF RETAINING THE OEM HOOD PROP-ROD)
RUBBING ALCOHOL

Step 4

In your hardware packet there are 3 sections of Velcro. Each of the 3 sections need to stay together until the installation is complete. The Velcro has a hard plastic side and a softer material side. Clean the areas on the radiator support circled below **as shown in fig.D** with rubbing alcohol, then remove the clear backing on the hard plastic side of the Velcro and attach it to the cleaned areas **as shown in fig.D**.

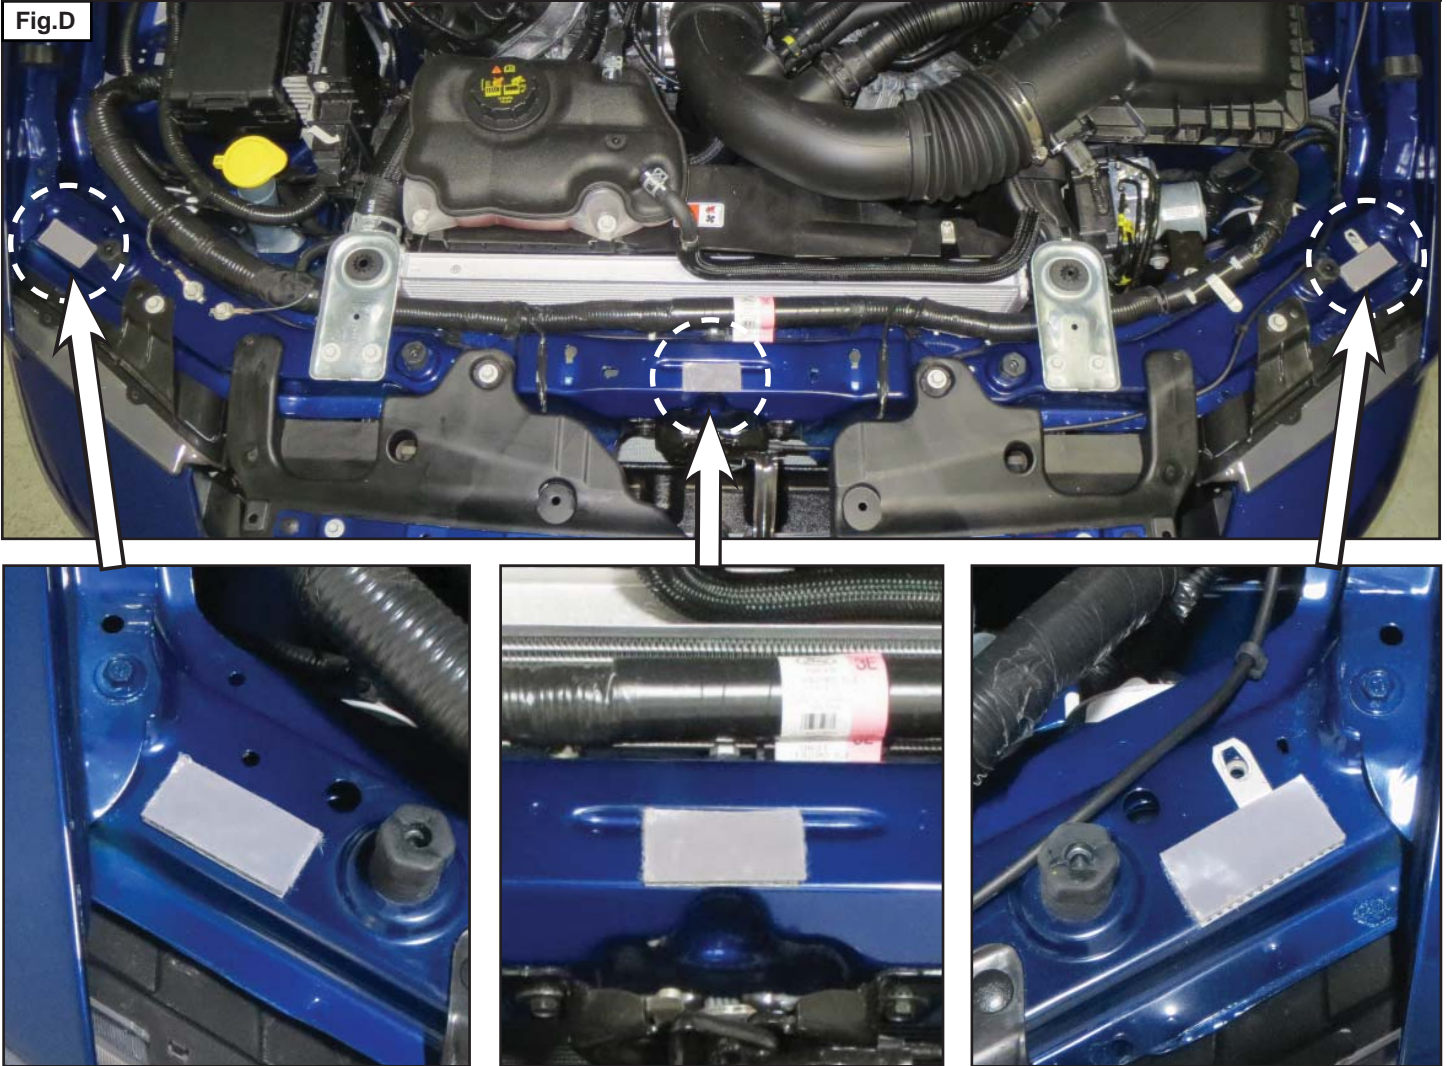Fig.D**Step 5**

Remove the clear backing on the other side of the Velcro. (2 people are needed for the next step to support the hood). Clean the areas on the bottom side of the radiator cover with rubbing alcohol where the Velcro will come in contact with the radiator cover. Install the new Cervini radiator cover in place with the factory push pins in the front of the radiator cover. Then firmly press the 3 areas where the Velcro is attached.

Step 6

If the prop-rod is being re-used, clean the area where the holder needs to be attached with rubbing alcohol. Attach the prop-rod holder. Use the factory radiator cover as a reference for prop-rod holder location.
DO NOT REMOVE RADIATOR COVER FOR 24 HOURS, THE VELCRO NEEDS TO ADHERE TO THE RADIATOR COVER!