



PART# 7019 & 7019 B, UPPER BILLET GRILLE W/ FOG LIGHTS
PART# 7025 UPPER BILLET GRILLE W/ RUNNING HORSE
PART# 7073 UPPER BILLET GRILLE W/ COBRA

Pre-fitting the billet grille: Place the billet grille in the top mouth opening of the bumper. Center the grille in the mouth opening and make sure the grille bars are parallel to each other.

Installing the billet grille: After the bumper has been painted center the grille in the mouth opening. Use the four Phillips screws provided to secure the grille to the bumper in the pre-drilled locations **as shown in fig A.**

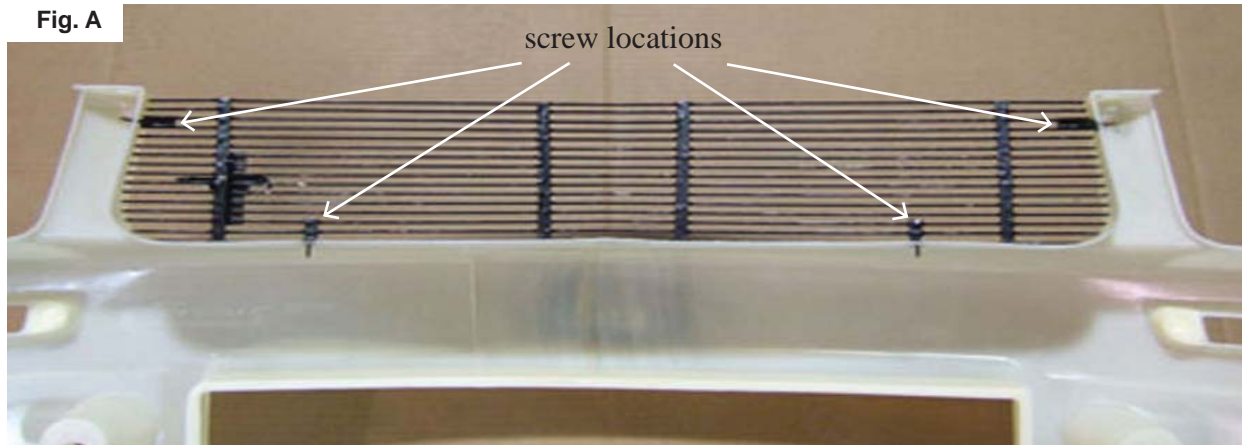

Part # 7019 & 7019 B, Only! Installing the fog lights: Align the light mounts, with the three holes in the back of the fog light bucket and snap it into place **as shown in fig B.** With the tapered holes in the light bezel facing up, screw it to the light bucket **as shown in fig C.** The light buckets have two steps on the back of them to help align it to the grille. Align the steps on the back of the light bucket to the pre drilled holes in the grille trim rings and screw it to the grille **as shown in fig D.**

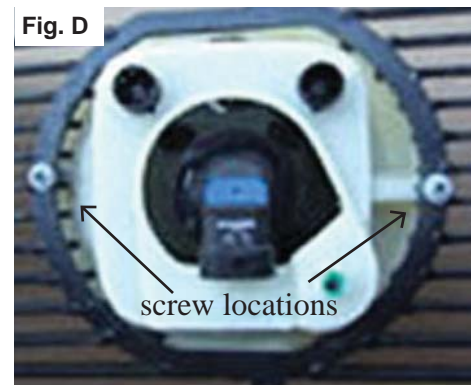

| PART #7019, 7019 B | | |
|--------------------|-------------------|-------------|
| QTY | DESCRIPTION | HARDWARE # |
| 8 | LONG BLACK SCREWS | WE2623 |
| 12 | HEX HEAD SCREWS | 992210A145 |
| 2 | FOG LIGHT BUCKETS | 7026, RA-LA |
| 2 | FOG LIGHTS | 7015 |
| 2 | BRACKETS | 7086 L&R |
| 4 | BUTT CONECTORS | MC7227K13 |



| PART #7025,7073 | | |
|-----------------|-------------------|------------|
| QTY | DESCRIPTION | HARDWARE # |
| 4 | LONG BLACK SCREWS | WE2623 |