


JLT Billet Lower Grille Bezels (2013-14 Mustang GT/V6) #JLTGB-FM13

1	Gather all of the following tools needed for the installation: Marker, 2 1/2" hole saw, drill
2	Raise car to good working height using lift or jack and jack stands. This is not 100% necessary, but helps.
3	<p>Mark your grille where it needs to be drilled.</p> <p>The grille is made up of hexagons, come over from the outer edge to the 2nd full row of 3, find the CENTER hexagon and mark the upper inside corner with your marker as shown here: Use your 2 1/2" hole saw and drill this out</p> 

4 This is what it will look like when drilled:

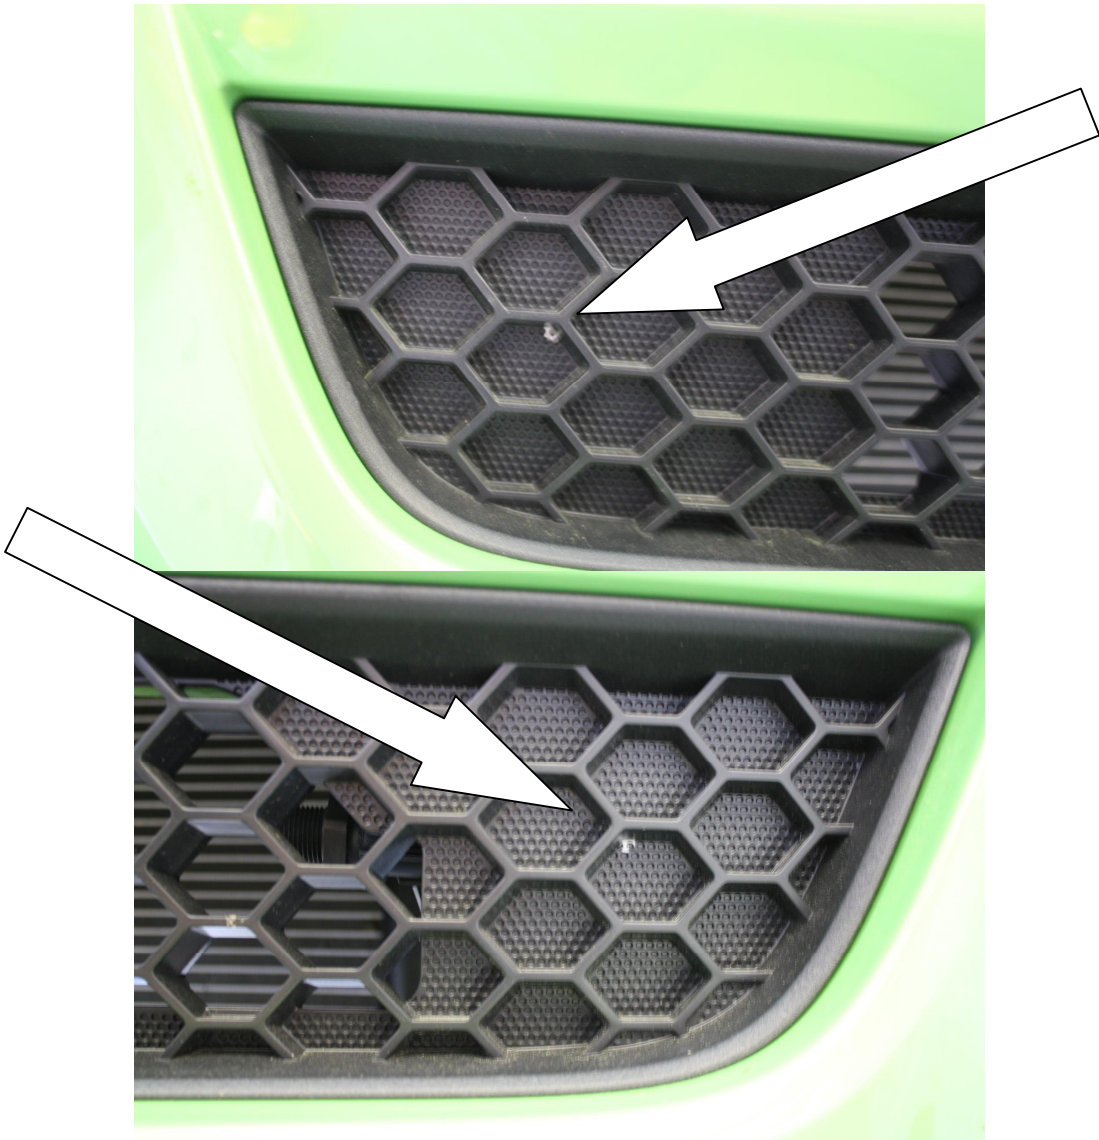

Use your hand or a rubber mallet to "snap" in place.



Thanks for the business. If you have any questions, please e-mail jay@JLTtruecoldair.com or call 757-335-1940. Our hours are Monday-Friday, 8:00am – 5:00pm Eastern Time.