



232 Branford Rd.  
North Branford, CT 06471  
Orders: 203.481.9460  
Tech: 203.481.9943  
Fax: 203.481.9641

## Product Information:

**15-730, 15-734, 15-736 & 15-738**

**Ford 5.0 Coyote Oil Pans.**

When installing these oil pans the oil pan locating pins on the factory Coyote windage tray will need to be removed. These pins aid in production assembly of the engine, but are not required for this installation. To make the modification cut off the plastic pins and file the spot smooth so the oil pan and the tray lay flat against each other.

### **15-738 Front Sump Pan.**

Due to the lack of OEM front sump Coyote applications there are a few modifications needed to properly install our front sump coyote pan.

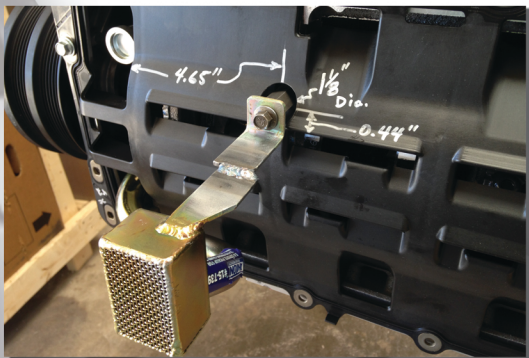


Image left shows the location you will need to modify the tray in order to properly mount the pickup tube. In addition to this modification you will also need to move the pickup mounting bolt from the OE position to this location.