

Modern Billet Polished Billet Window Switch Kit - Coupe (97-04 All)

Included in the box:

- ✓ (2) Polished door lock tabs
- ✓ Polished mirror tab
- ✓ Polished window button
- ✓ (4) Polished window tabs

Tools Required:

(2) Flat head screw drivers




1. You will need to remove your factory door lock knobs, power window knobs and power mirror knob. The knobs can be pried off with a flat head screwdriver(s) (shown below in photos)



- Here is what the controls look like without the factory knobs (photo below). Notice the round notches below. When installing the new knobs you will have to match the round notches on the new knobs with the round notches on the switches.



- Shown below is a photo of the back of the new knob (notice the round indentation that will have to match up with the round piece on the switches).

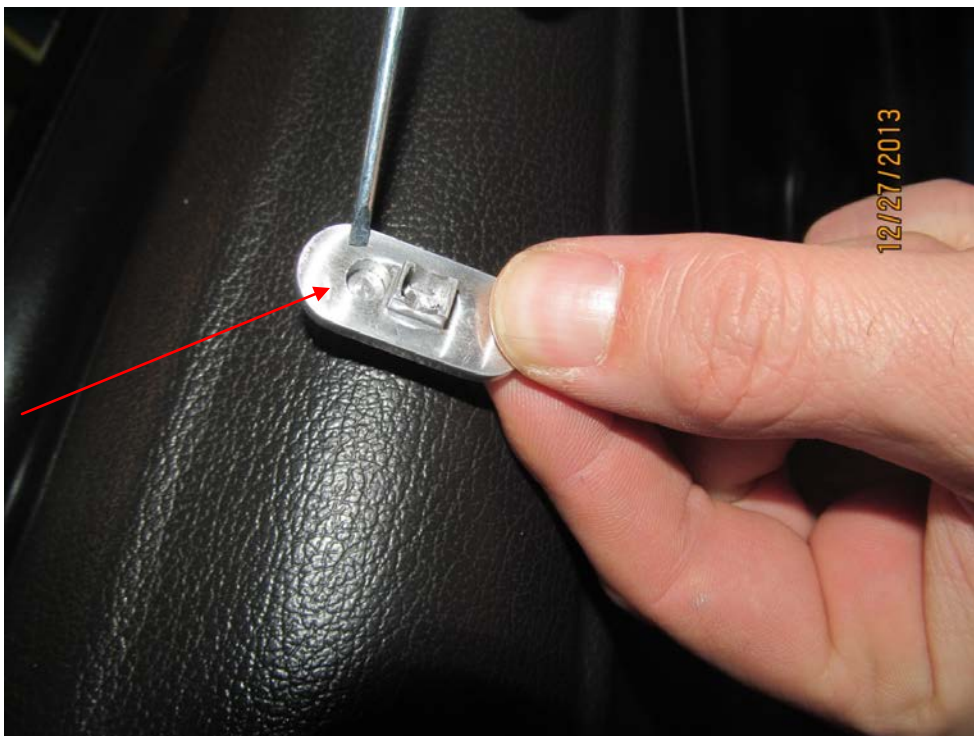

- The new ones will snap into place when the round notches are lined up.



- The electric mirror knobs pry off the same way. There is a rubber spacer that is included with the factory knob. I used it with the new Billet knob (see photo below of spacer).



6. Factory mirror knobs removed.



7. Photo of finished Billet package. This is a great enhancement to your mustang interior.



Installation Instructions Written By AmericanMuscle Customer Jeff Pritt 1.22.2014