

Covercraft UVS100 Heat Shield - Tri-Bar Pony Logo (13-14 All)

Hardware included in the box:

- (1) One Covercraft UVS100 Heat Shield

Tools required for installation:

- ✓ Heat shield only



Installation procedure:

1. Safety first! Make sure engine is turned off and vehicle is parked on a level surface.




2. While in front seat, unfold Heat shield and lay it flat on the dashboard. Make sure to have reflective silver part facing up towards the windshield. Push Heat shield all the way into the gap between dashboard and windshield.



3. Lift Heat shield up off dashboard and press against the windshield



4. Use both driver side and passengers sun visor to hold Heat shield in place.

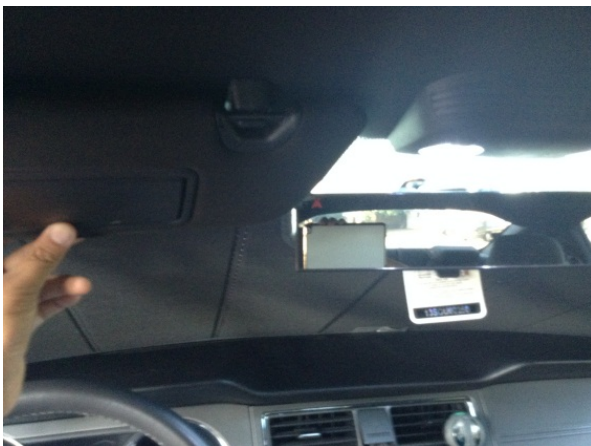

5. This is what installed properly installed heat shield should look like within vehicle. Heat shield is custom fit and should block close to 95% of windshield. Heat shield does not protect area directly above rearview mirror.

6. Heat shield should be removed prior driving.



7. View of Heat shield from outside the vehicle.



Installation Instructions written by AmericanMuscle Customer Allen Syed 6.23.2014