


SR Performance Throttle Body Spacer (05-09 GT)

Tools Required:

- Flathead screwdriver
- 8 mm socket wrench
- 10 mm socket wrench (with extension)

What's In Box:

- SR Performance Throttle Body Spacer
- Gasket
- Four bolts and washers

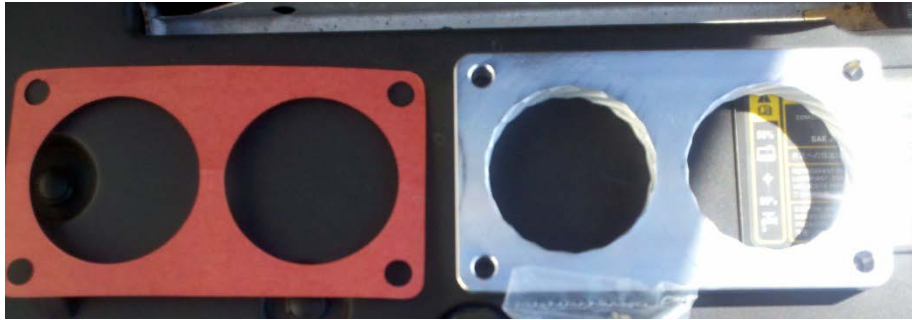

Estimated Installation Time: Approx. 30-45 Minutes


BEFORE:



Installation Instructions:


- 1) Make sure engine is cool before handling. Start by loosening clamps where the intake meets the throttle body.
- 2) Use the 8mm wrench to remove the top (2) bolts from the throttle body.

- 3) Use the 10mm wrench for the bottom (2) bolts from the front of the throttle body. Without the extension it is almost impossible to unscrew the bottom bolts.
- 4) Take throttle body off the intake manifold and hold in one hand. With other hand, place in order: Throttle Body, Gasket, Spacer, and Intake Manifold. Screw in all (4) bolts and washers using the 10mm wrench. (Here is a picture before tightening bolts completely).

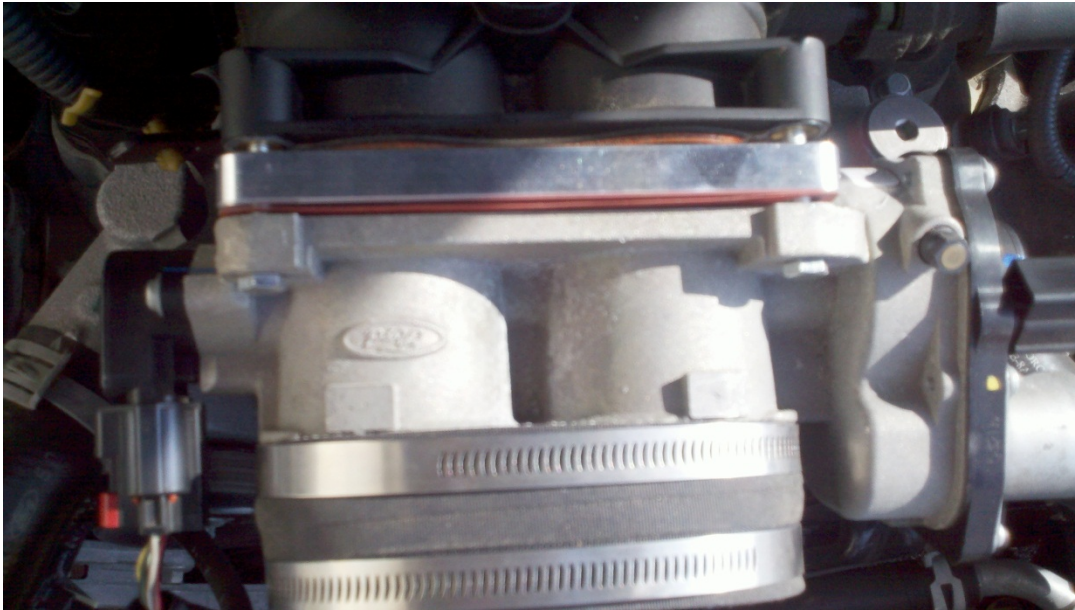

- 5) Reattach Intake tube and filter and tighten clamps to a secure fit.
- 6) Installation is complete!

AFTER:

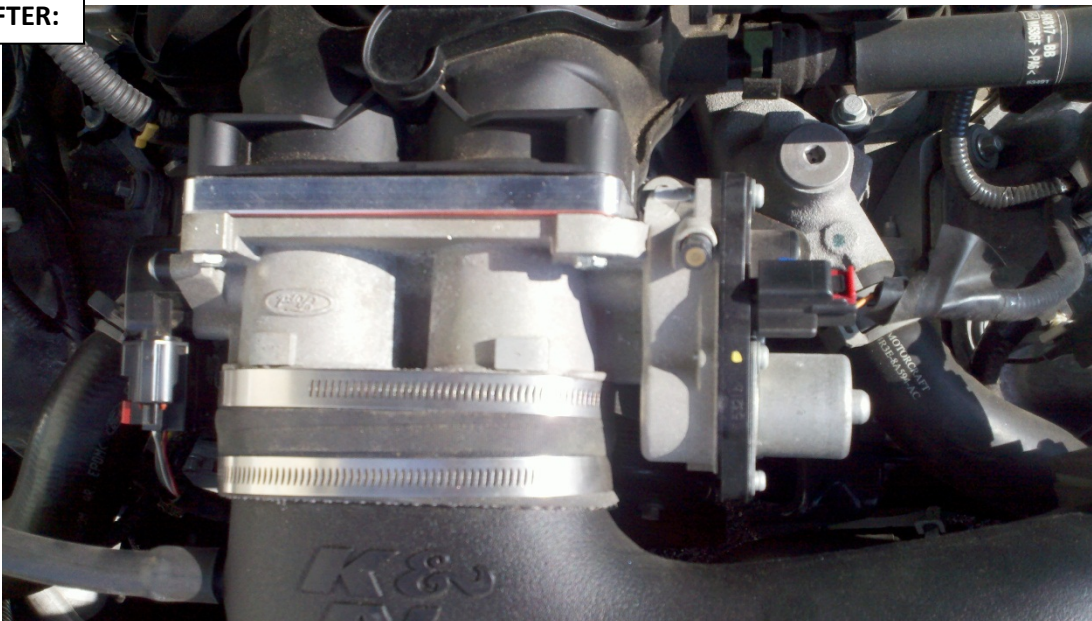

Installation instructions provided by American Muscle customer Sam Eriske 4.24.12