

# CORBEAU<sup>®</sup>

seats for street, race, and offroad

Corbeau Harness Bar  
2005-2012 Ford Mustang  
Part # HB0508M

## Disclaimer

Motorsports can be very dangerous. No warranty or representation is made as to this Harness Bars ability to protect the user from injury or death; the user assumes that risk.



## Installation

*Please Note: You will need a #50 Torx bit for this installation*


1. Unsnap the upper stock plastic shoulder belt bolt cover and remove the bolt as shown. You will need to do this on both sides of the vehicle.



2. Remove the stock retaining washer and spacer from the factory belt, and place the spacer back in the pillar.

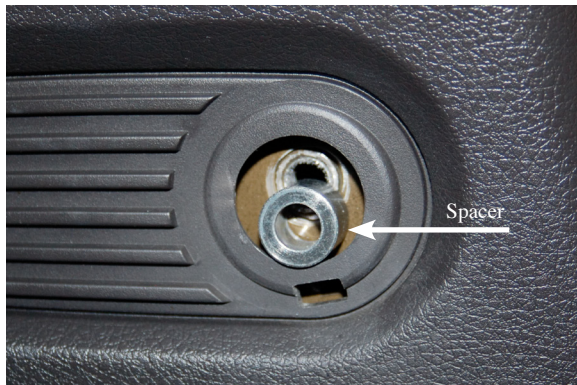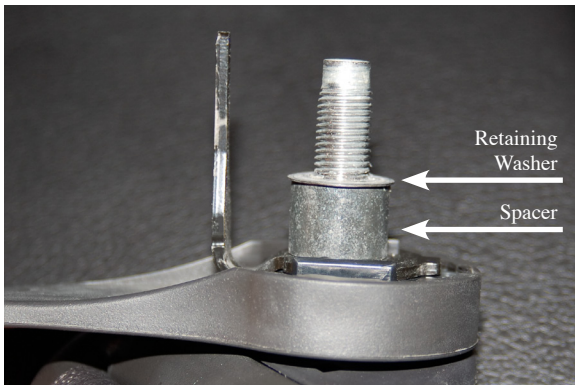

3. Assemble the stock belt and harness bar as shown. Install the harness bar into your vehicle. There might be slight tolerance variations from vehicle to vehicle. Because of this you may need to bend the ends slightly for proper fitment. Refer to instruction number 6 for proper factory belt routing. At this time you will not fully tighten the bolts.

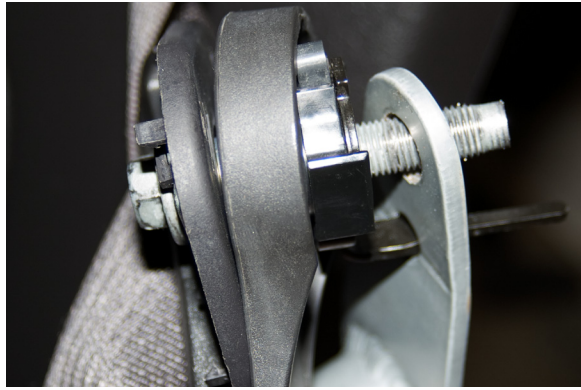

4. Loosen and remove the lower Torx head bolt as shown. Remove the retaining washer and spacer from the bolt. You will need to do this on both sides of the vehicle.



Driver




Passenger

5. Using the supplied bracket, support rods, and hardware, assemble the brackets as shown. For the passenger side you will need to retain the stock spacer as shown. You will then reinstall the stock Torx head bolt into the stock mounting position.



Driver

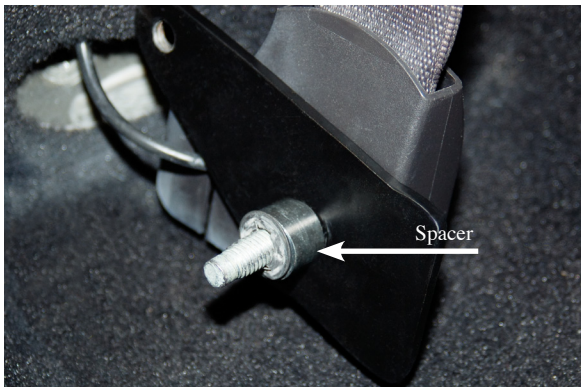

Passenger


**Support Rods:**



The finished lower bracket should look like this:



Driver

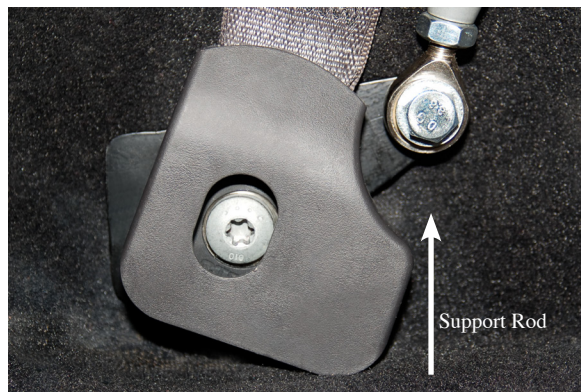

Passenger

6. Connect the support rods to the harness bar using the bolts and washers supplied. Adjust as necessary before tightening bolts and nuts. The final installation should look like this:

