

Installation Instructions for Billet Grille Overlay (99-04 Mustang)


Step 1:

Open hood and remove four plastic retaining pins holding factory grille to radiator support.



Step 2:

Once the upper part of the grille is free, carefully pry the grille back and use a 7mm socket or wrench to remove the four bolts holding the lower part of the grille to the bumper.

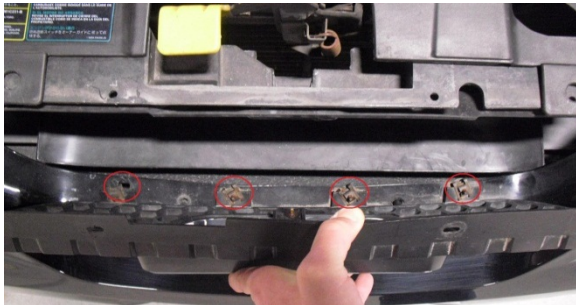


Step 3:

Place factory honeycomb grille face-down over the billet grille with something soft underneath to prevent scratching. Use the supplied hardware to attach billet grille to factory honeycomb grille as shown below.



Step 4:

Re-attach bottom part of grille with the four bolts you removed in Step 2.

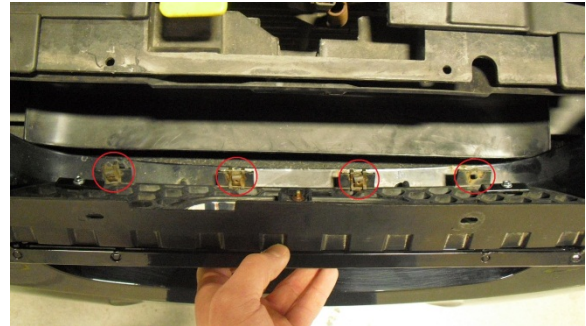

Step 5:

Re-attach upper part of grille with the four plastic retaining pins you removed in Step 1 to complete the installation.



Installation Instructions for Billet Lower Grille (99-04 Mustang)

Tools Required:

Phillips Head Screwdriver
Drill & 3/16 Bit

If you cannot access the rear of your front lower grille while the car is on the ground, raise the front end and support securely with jackstands.

Step 1:

Center the grille in the lower opening of the front bumper. Using a marker or similar, mark the location of the outer grille tabs on the front bumper cover as shown below.



Step 2:

Remove the billet grille and drill the 2 holes using a 3/16 bit. Only drill through the first layer of the bumper cover, there is no need to drill any further.



Step 3:

Re-install the billet grille and use the supplied Phillips head screws to secure it to the bumper cover from the back side. Secure each screw with the supplied nuts. This completes the installation of your lower billet grille.

