

## **Raxiom Modified Turn Signal Flasher (96-04 All; Excludes 99-04 Cobra):**


### **Required Tools:**

- ✓ A good flashlight or other light source


**Installation Time:** Approximately 15 minutes

### **Installation Instructions:**

1. The turn signal flasher is located above the OBD II port on the driver's side, underneath the dash and closer to the center console. The photo below shows what the OEM flasher unit looks like: yellow box on top of the red and black connector.

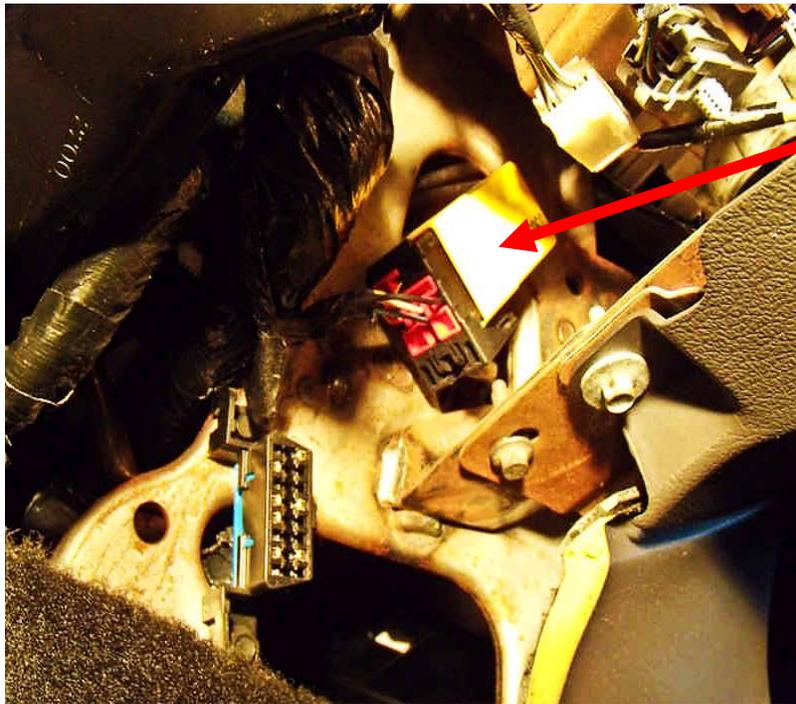

2. Pull the yellow relay unit down towards the OBD II port and out of the bracket holding it in place.

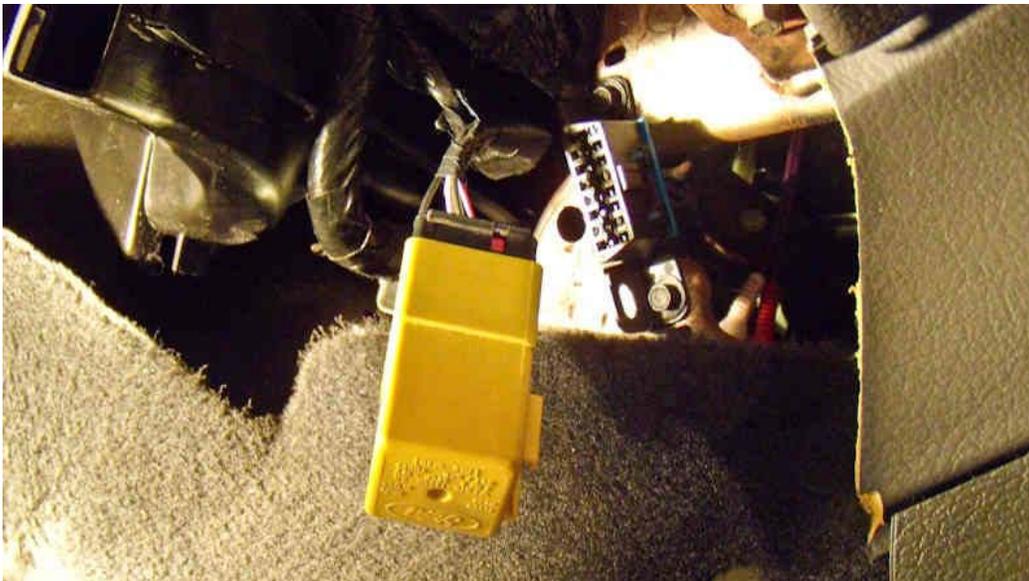

3. Unclip the yellow OEM flasher unit and replace it with the Raxiom Modified Turn Signal Flasher. Be sure to line up the blade connectors in the same manner as the OEM unit.



4. Reattach the modified flasher unit to the bracket underneath the dash.



Installation Instructions written by AmericanMuscle customer John Shea 3.7.12