

How to Install a Billet Grille for a 2010-2012 Mustang GT



The below installation instructions work for the following products:

- [Polished Billet Grille \(10-12 GT\)](#)
- [Black Mustang Billet Grille \(10-12 GT\)](#)
- [Polished Pony Delete Billet Grille \(10-12 GT\)](#)
- [Black Pony Delete Billet Grille \(10-12 GT\)](#)

Here at American Muscle, we're all about DIY (do it yourself). Of course, there's nothing wrong with seeking out a little bit of tech help prior to taking on an installation on your own. Our Mustang installation guides will provide valuable instructions and hopefully answer any how-to questions that you may have along the way.

Installation Instructions for 2010+ Mustang Upper Billet Grille Overlay

Tools needed:


- Flat Head & Phillips Head Screwdrivers
- Ratchet with 8mm & 10mm Sockets
- Drill with 9/64 Bit (For GT Only)

Installation:

1. Remove plastic [radiator](#) shroud cover by removing seven plastic retaining pins with a flat-headed screwdriver.



2. Remove two upper headlight mounting bolts (10mm), and two upper bumper cover mounting bolts (8mm).

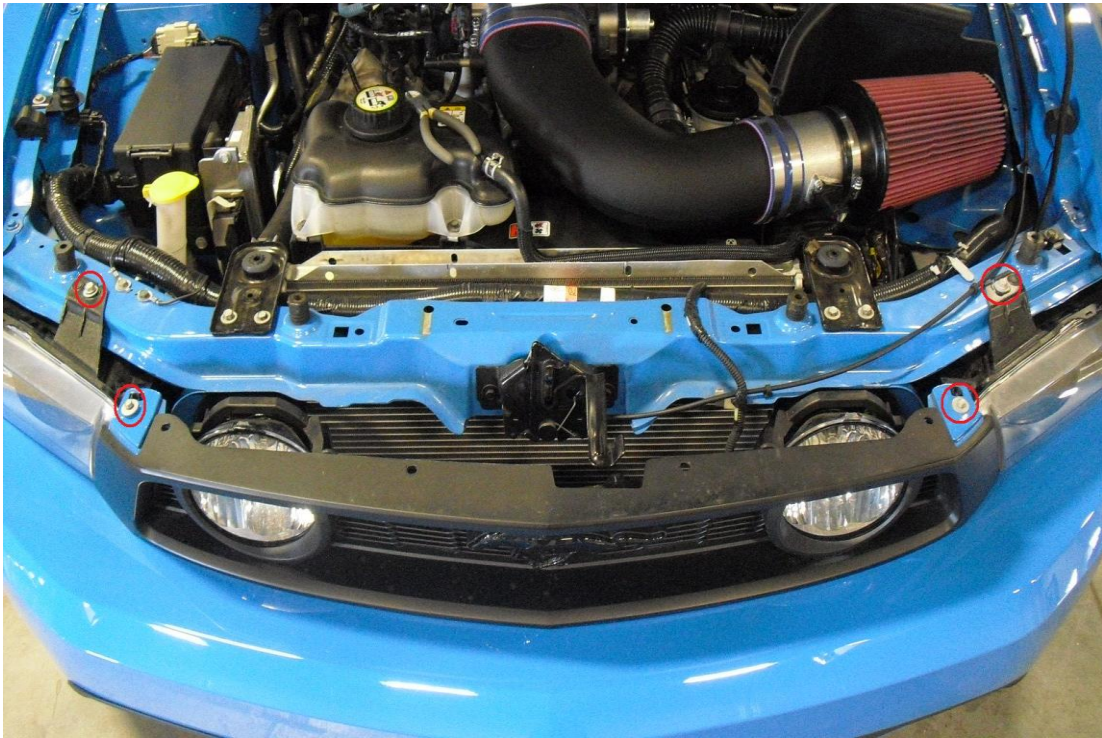

3. Use a flat-headed screwdriver to carefully pry the four outermost mounting tabs of the grille (two on each side) from the bumper cover. Once these outer tabs are loose, carefully but firmly pull up and out on the grille to fully release it from the bumper cover. Make sure to unplug the fog light wiring harnesses before completely removing the grille from the vehicle if it is so equipped.



The below photo shows the mounting points of the grille to the front bumper cover:



4. Install the billet overlay by placing it over the factory plastic grille and using the supplied hardware to attach it as shown. If your Mustang is a V6, there will be three mounting points, one at the top and two on the bottom. If your car is a GT, it will mount as shown with four mounting points in the center section of the grille.



5. Place the outer pieces of your billet grille overlay over the factory grille and mark where you will have to drill a small hole for the mounting hardware. Outer pieces are side-specific, so make sure they are on the correct side before marking. Use a drill and 9/64 bit to drill holes in the factory grille for your mounting hardware.



6. Once your holes are drilled, use the supplied hardware and attach outer pieces as shown with a phillips-headed screwdriver and 6mm socket.



7. Once your billet overlay grille is fastened securely to your factory grille, re-install grille into bumper cover and reverse Steps 1-3 above to complete the installation.