


## Installation Instructions for Bullitt Style Fuel Door (05-09 Mustang)

### Tools Required:

7mm Socket  
Allen Keys

### Step 1:

Open the factory fuel door and remove the plastic retaining ring from the cap. Also remove the two rubber bumpers attached to the body along with the two 7mm bolts holding the door to the body. You can now remove the factory fuel door.

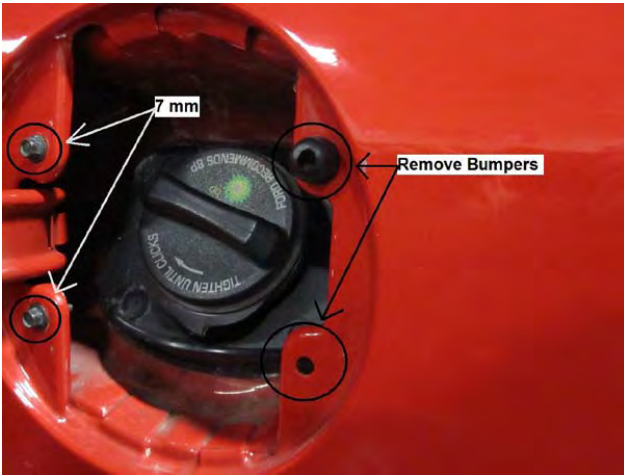

### Step 3:

Loosen the nut holding the mounting clip to the fuel door and install the door onto the body as shown below. Once the clip has secured the door to the body, tighten down the bolt using an allen wrench. Install the lower hardware and tighten it as well.



### Step 2:

The supplied allen bolts will go through the fuel door, through the bracket, and through the factory holes. Then tighten the allen keys with the supplied nuts.

