Mustang Lower Billet Grille (05-09 GT) - Installation Instructions



The below installation instructions work for the following products:

- Polished Mustang Billet Grille (05-09 GT)
- Black Mustang Billet Grille (05-09 GT)
- Polished Mustang Pony Delete Billet Grille (05-09 GT)
- Black Mustang Pony Delete Billet Grille (05-09 GT)
- Polished Retro Mustang Billet Grille (05-09 GT)
- Black Retro Mustang Billet Grille (05-09 GT)
- Polished Mustang Billet Grille (05-09 V6)
- Black Mustang Billet Grille (05-09 V6)
- Polished Retro Mustang Billet Grille (05-09 V6)
- Black Retro Mustang Billet Grille (05-09 V6)




Please read through the instructions carefully before starting this project. Take the time to get all the materials together as well as all the safety equipment.

Tools Required:

- Phillips Head Screwdriver
- 5.5 mm Wrench or Socket

Installation:

1. Safely raise the front end of the car to gain access to the plastic drip pan located behind the front bumper. Remove the seven 5.5 mm screws securing the pan and remove it from the vehicle.

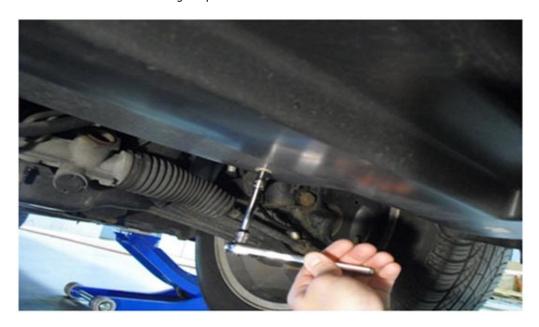


2. Place the four included U-Clips over the four included J-Hooks as shown.




3. Pre-thread the hardware on the grille using the four U-Clip / J-Hook assemblies from Step 3 and the four included sheet metal screws. Do not fully tighten the screws, only thread them in 3-4 turns.



4. Place the billet grille over the factory grille. From underneath the car, adjust the J-Hooks to wrap around the factory plastic grille as shown.

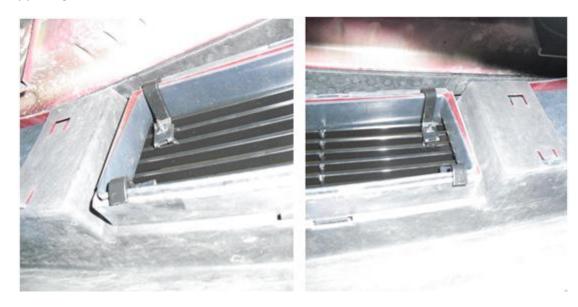

5. Once all of the hooks are secured around the factory bumper, use a Phillips head screwdriver to tighten the screws from the front of the vehicle.

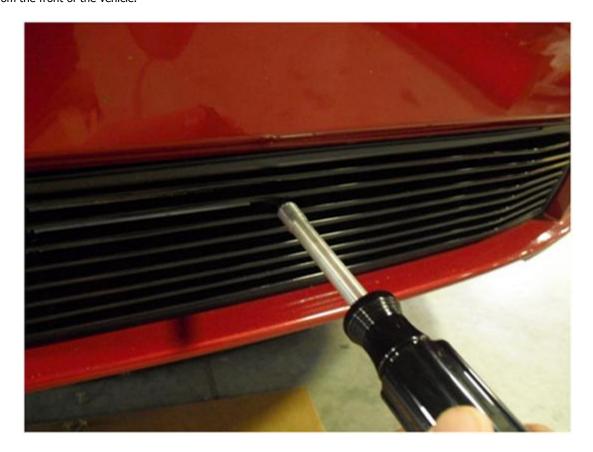

6.	After making sure grille is properly aligned and secured, re-install the factory drip pan that was removed in Step1 to complete the installation.
	Installation instructions provided by Manufacturer
	Find more how-tos , instructions and videos at <u>www.americanmuscle.com</u> !