Installation Instructions for 2013 Mustang Halo Fog Lights

You must remove the front bumper assembly to properly install these fog lights. See included "2013 Bumper Removal Instructions" before beginning

Tools Required:

8mm Socket T15 Torx Bit

Step 1:

Once the front bumper cover is removed, use an 8mm socket to remove the fog lights from the grille.



Step 2:

Use a T15 Torx bit to remove the LED bulb assembly from the factory fog light. Remove the bracket from the factory fog light assembly by releasing the tabs on the sides of the bracket.




Step 3:

Install the new fog light into the bracket and reinstall the bracket onto the factory grille as shown. If equipped with Halo's, remove the backing from the adhesive on the ballast and apply it to the underside of the bumper (be sure to place the ballast about three inches from the edge to avoid any interference with headlights).



Step 4:

Use the supplied Scotch Locks to wire the Halo wires into the parking light wiring harness as shown (Red – Purple / Black – Black/Green Stripe).

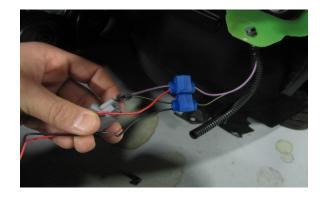

Step 5:

Check to make sure both the Halos and the fog lights operate properly. Once proper operation is confirmed, re-install the bumper to complete the installation.