

Installation Instructions for Raxiom Switchback Turn Signal Conversion Kit

Step 1:

Remove headlights/turn signal from vehicle if connectors are not easily accessible

Step 2:

Locate the parking light connector and remove socket from light housing

Step 3:

Find the signal wire and the ground wire on your vehicle.

87-93:

Signal – Brown wire

Ground – Black wire

1999-2004:

Signal – Brown wire

Ground – Black wire

2005-2009:

Left Signal – Green wire

Right Signal – Black with pink stripe

Ground – Black wire

2010-2014:

Signal – Purple with white stripe


Ground – Black with Yellow Stripe



(2010-2014 Shown above)

Step 4:

Using the supplied splice in connectors, attach one connector to the signal wire and one to the ground.

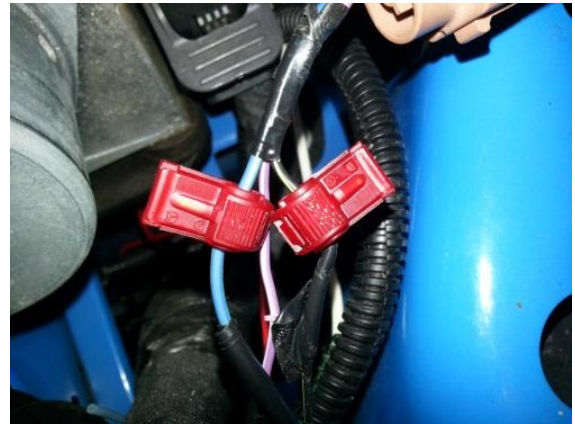

Step 5:

Install the spade connectors onto the resistor wires and plug into the splice-in connectors you attached in Step 4 (orientation not important).



Step 6:

Securely mount the resistor to the vehicle being sure to avoid moving parts. The resistor can put out a lot of heat, be sure to keep away from other wiring.

Step 7:

Reinstall the headlights/turn signals into the vehicle to complete the installation.