

Steeda Billet Aluminum Brake Duct Kit (05-09) - Installation Instructions



The below installation instructions work for the following products:

- **Steeda Billet Aluminum Brake Duct Kit (05-09)**




Please read through the instructions carefully before starting this project. Take the time to get all the materials together as well as all the safety equipment.

Overview:


Steeda's billet brake duct kit is designed to fit both the Steeda 2005+ Front Bumper cover and the Stock 2005+ Front bumper cover. Keep in mind that it can be modified to fit most applications other than 2005+ Mustangs.

Installation:


1. Install the brackets to the backside of the billet brake ducts with the supplied hardware. Use the #10 washer under the head of the bolts. Make sure you install them with the tabs facing to the front of the car.
2. For installation of the brackets into the Steeda Front fascia, line up the brackets in the brake duct opening just to the inside of the fog lights and mark on the inner bumper where the tab is. Drill a Y* hole and use the supplied 6mm bolts, washers and lock nuts to install.

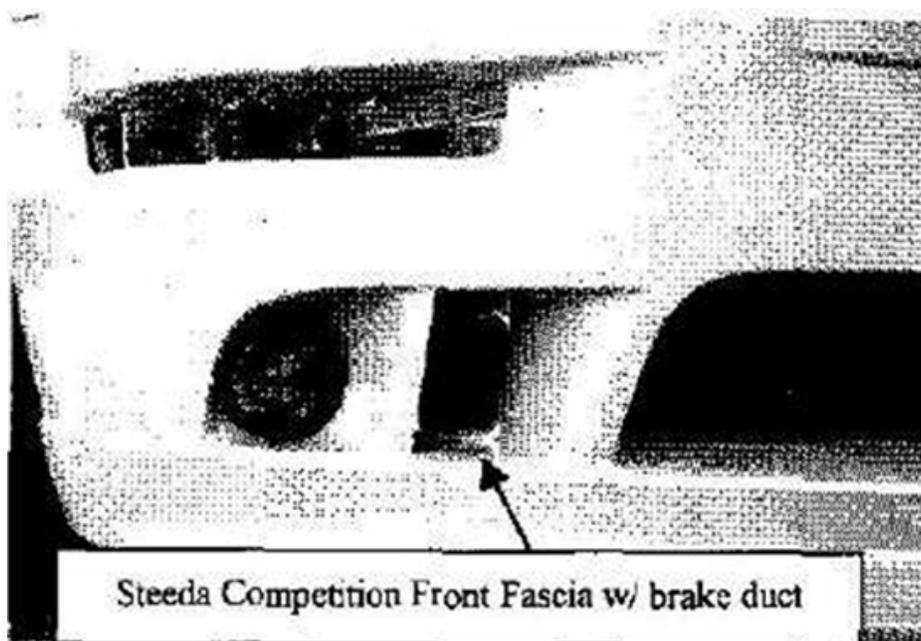

- Installation in the Stock bumper cover requires that you trim an opening to accommodate the billet brake ducts. Use the supplied hardware to install.

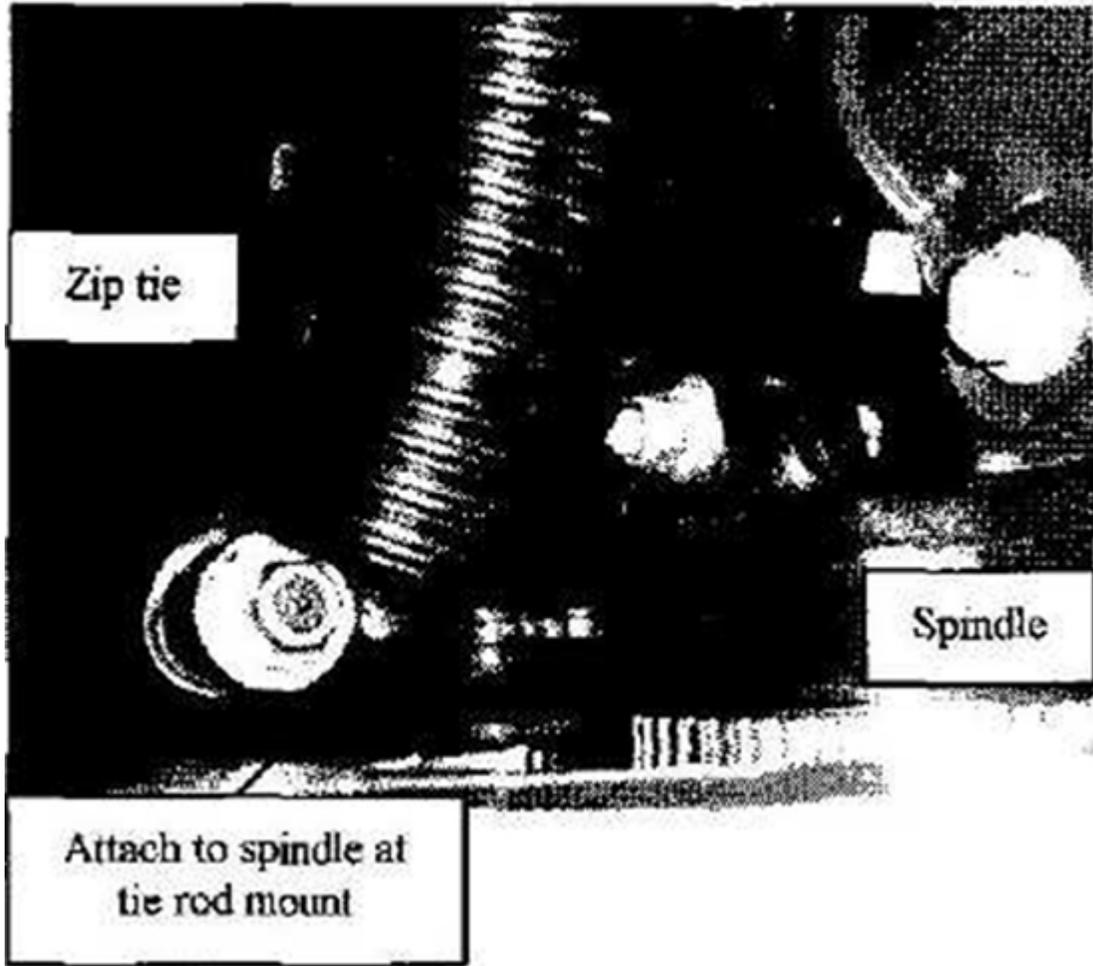

- Once the brackets are installed use the supplied hose clamp to attach it to the back of the brake ducts. Rout it away from moving suspension parts and attach it to the spindle and tie rod mount so it will allow air to pass to the brake rotor. Use zip ties along the way to secure the ducting, see pic below. Installation is now complete.

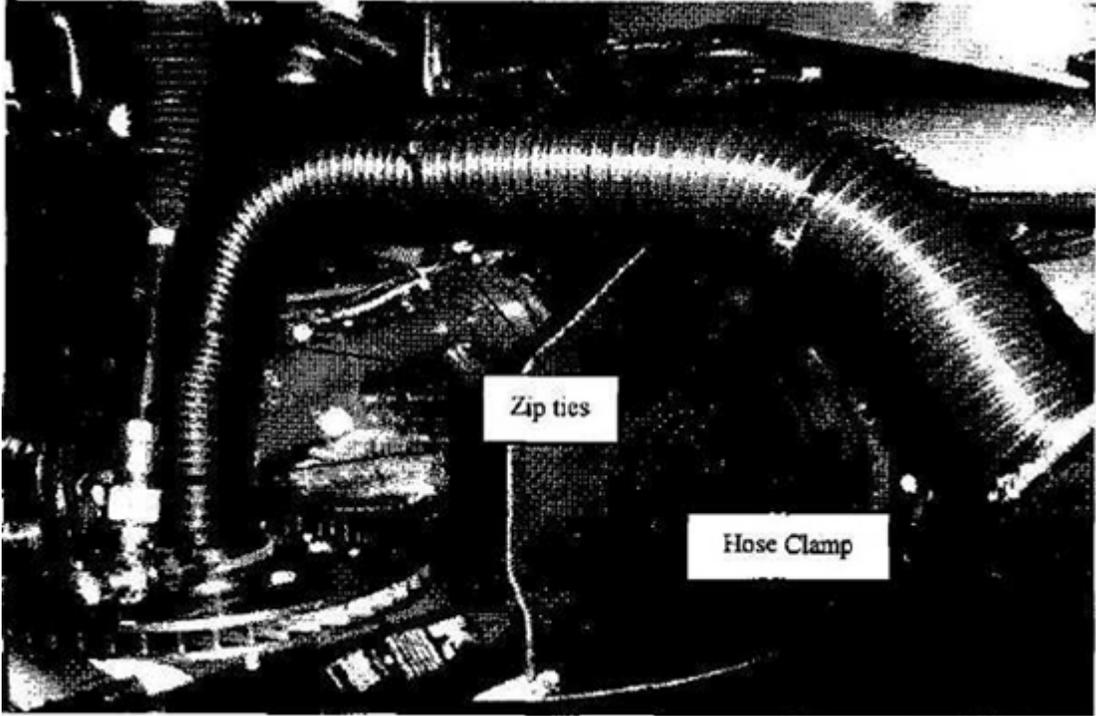

Installation instructions provided by Steeda

Find more **how-tos**, **instructions** and **videos** at www.americanmuscle.com!