

AMERICAN MUSCLE GRAPHICS

Installation instructions Mustang Window Tint

Tools Required:

Supplied Tool Kit

Heat Gun

Spray Bottle

Prep:

Fill spray bottle with water, mixing in a few drops of baby shampoo. This helps with lubricity without affecting the tint. Thoroughly clean all windows to be tinted with ammonia-free glass cleaner, inside and out. Also clean the rubber belt moldings on the outside of the two front windows. Also clean the interior and exterior of the car thoroughly. Dirt will find its way to the tint due to


Step 1 (Front Power Windows):

Begin by soaking the outside of the window with the shampoo/water solution in your spray bottle.



Step 2:

Peel the backing film from the tint and lay the tint on the outside of the window, adhesive side out. This is to have the tint in ready position when you are ready to position it in the inside of the window.

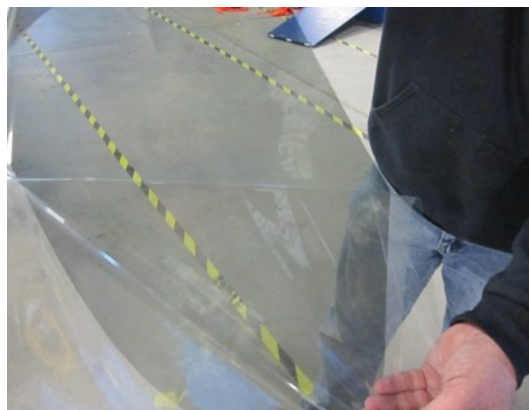

Step 3:

Soak the inside of the window in the shampoo/ water solution and place the tint on the inside of the window. Position the tint so there is approximately 1/16" of glass showing at the top as shown below.



Step 4:

When the tint is properly positioned, use the supplied plastic squeegee to carefully push any air bubbles toward the edges as shown. This secures the top half of the tint to the window before moving to Step 5.



Step 5:

Using one of the supplied tools (whichever one fits your application the best), carefully tuck the tint into the rubber window trim as shown. Usually starting in the front near the mirrors is easiest.



Step 6:

Once the tint is fully secured under the rubber trim, use the squeegee to push out any remaining air bubbles. Be sure to use plenty of solution to keep the surface well lubricated so as not to wrinkle the tint.



Step 7 (Quarter Windows):

Soak the inside of the quarter window with the shampoo/water solution.




Step 8:

Carefully peel the backing film from the tint and position the tint on the quarter window.



Step 9:

When the tint is properly positioned on the window, use the squeegee to push out any remaining air bubbles as shown.

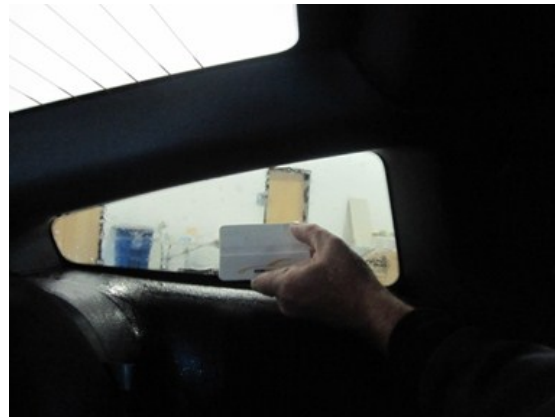


Step 10 (Rear Window):

Begin by laying the rear window tint over the rear window with the backing out. If necessary, trim any excess backing film from the edges of the tint. Use the squeegee to spread the tint as evenly as possible over the rear window pushing towards the edges.




Step 11:

Using a heat gun, heat the tint until it begins to slightly wrinkle while pushing it to the edges with the squeegee, forming the tint to the rear window. Start from the center of the window working outwards and downwards. Apply heat cautiously until you get a feel for how the tint reacts to the heat. Too much heat and you could wrinkle the tint beyond repair, too little

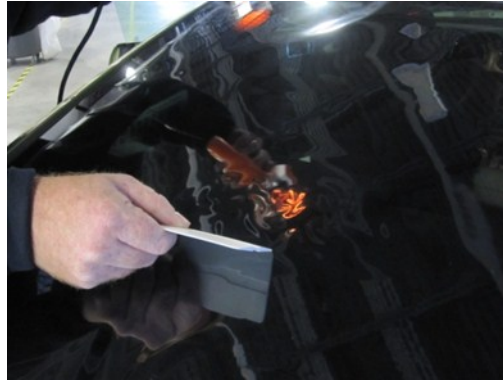

Step 12:


Once the tint is fully formed to the shape of the rear window, peel the backing away while soaking the tint with the shampoo/water solution as shown. Also soak the inside of the rear window at this point.

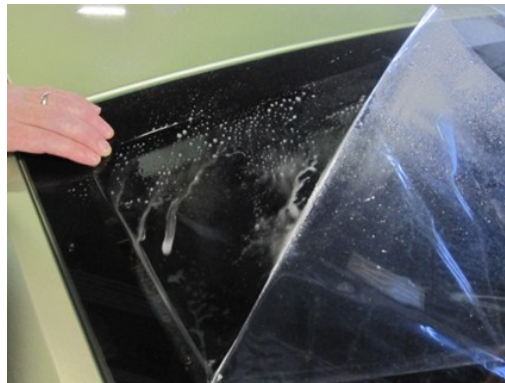

Step 13:

****Note - It may be helpful to have an extra set of hands for this next step****


Once the window and tint are thoroughly soaked in the solution, place it on the inside of

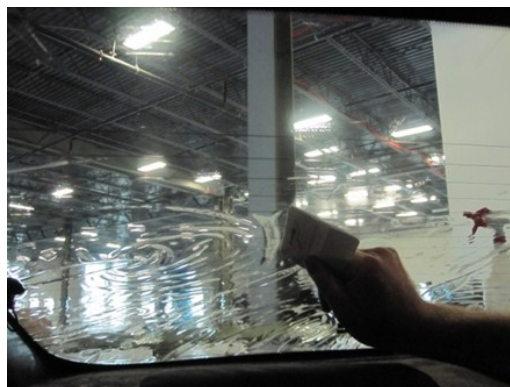

For 94-04 coupes a black piece of vinyl is supplied for the inside top of your rear window. Install this after you window tint is dry and can't be moved.

Step 1:

Spray inside rear window generously with the soap and water mixture

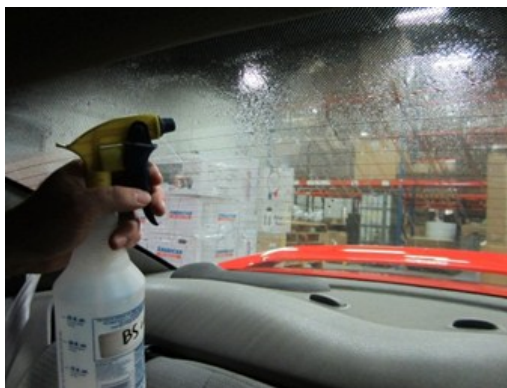


Step 2:

Peel the backing from the vinyl exposing the adhesive. It also helps installation if the back of



Step 3:

Place decal on the upper inside rear windshield. You will be able to maneuver the decal into position because of the soap and water solution you sprayed on earlier. Once you have the decal in its final position, use the plastic squeegee to push any air bubbles towards the outer edge-

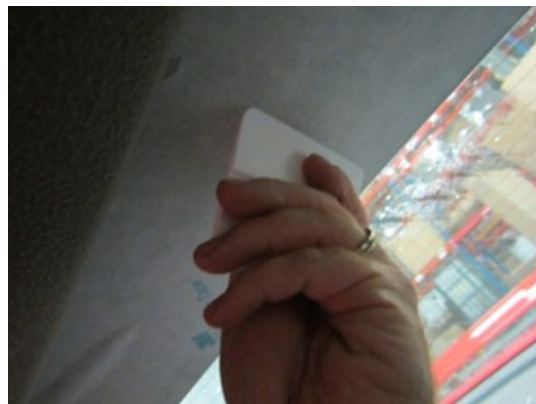

Step 4:

Spray the transfer tape with the solution. The solution will help with the release of the tape.



Step 5:

After the solution has been squeegeed out from under the decal and the transfer tape has been wet for about ten minutes start to remove the tape. Pull the tape slowly at a sharp angle back away from the decal. It may help to put the squeegee behind the tape to apply pressure to the decal holding it tight against the tape; this will help the decal from lifting up with the tape. Take your time and go slow pulling the tape. Make sure the decal is dry enough underneath, if it lifts up carefully press it down and wait for it to dry more.



Step 6:

Once the tape is off you can use a squeegee (*covered in a cloth that will not scratch the vinyl and keep the vinyl wet*) if you need to, but at this point you may need to use a pin or needle to release any bubbles, squeegeeing on vinyl that has been stuck to the surface may wrinkle instead of moving air from underneath the vinyl.



At this point the installation of your window tint is complete. Give the tint 2-3 days (depending on climate) to fully dry and adhere to the window surfaces. Do not open your front power windows for at least 2 full days after the installation, this could possibly damage the tint if opened too soon. Always use ammonia-free glass cleaner when cleaning your window tint.

Customer Service: 1-866-727-1266