

2015 Mustang RTR Grille Installation Instructions

Kit Components:

1 - RTR Grille

Tools & Materials Required:

Ratchet Flat Screw Driver 5.5, 7, 8mm Sockets

Part Number: 387376 / 387378

Step 1:


Jack the vehicle up and support the font end with jack stands.

Step 2:

Remove the 8 clips securing the plastic radiator cover to the support and remove it from the vehicle.




Step 3: Remove the 8 bolts securing the bumper cover to the rad support.

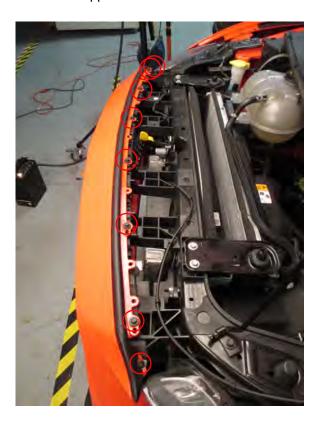

Step 4:

Support the front of the car so you can access the bumper splash shield. **Note there are two versions of the splash shield. Both are attached to similar locations

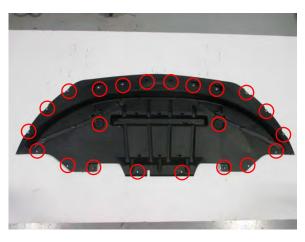


Step 5:

On each side of the bumper, remove the plastic clips holding the fender liner to the bumper.



Step 6:

Fold back the fender liner so that you can access the one 8mm bolt that holds the bumper to the fender. **Note: This bolt is tricky, it may help to remove the wheel for better access.

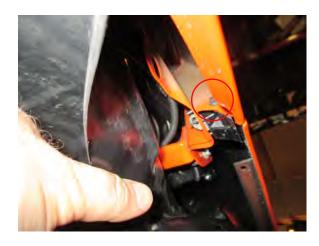

Step 7:

With the splash shield removed, you can access the back plugs for the turn signals and fog lights.



Step 8:

Once the bumper cover is ready to remove, using firm pressure pull the edge of the bumper to pop it from the clips. Have a helper support one side so that you don't scratch the paint. Slowly remove the bumper and support it on a soft non-abrasive surface.



Step 9:

Begin by removing the plastic bumper brace. Gently bend tabs as needed to remove support.



Step 10:

Next you will remove the factory grille by manipulating the tabs so that you can pull the grille away from the bumper cover. **Note this can be a little tricky take your time.



Step 11:

Remove the lower grille the same way you removed the upper. **Note the lower grille can be tricky take your time.

Step 12:

Install the RTR grille in the reverse order.